
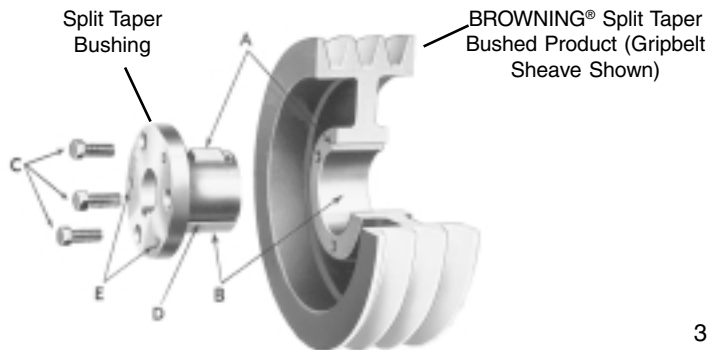


MOUNTING INSTRUCTIONS FOR SPLIT TAPER BUSHINGS

in


**Browning® Split Taper Bushed
Products**

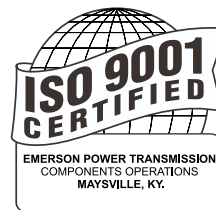

- A. External key, except G, H and Idler Bushings.
- B. Bushing barrel and Product bore are tapered.
- C. Bushing cap screws.
- D. Bushing barrel is split (except idler bushings).
- E. Removal holes are threaded, installation holes are not.


BEFORE INSTALLATION:

1. Make sure the shaft, bushing barrel & bore, BROWNING® split taper bushed product bore, keys and keyways are free of burrs, paint, etc. For idler bushings, make sure the bushing barrel and BROWNING® split taper bushed product bore are free of burrs, paint, etc.

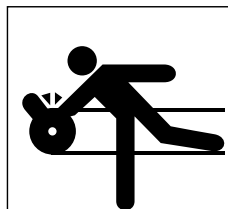

⚠ WARNING

Disconnect power before installation and maintenance. Failure to do so can result in severe injury or death.

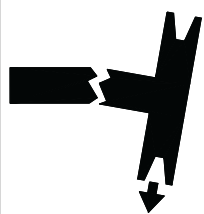

⚠ CAUTION

To avoid damage, supporting structure including shafts and bearings must be designed to handle transmitted loads and belt tension(s).

2. For proper operation, make sure the shaft size is within the size limits shown in Table 1. Some applications may benefit from tighter shaft tolerances.



⚠ WARNING

Lubricant on bushing barrel, hub or screws could lead to breakage.

⚠ CAUTION

Mounting a BROWNING® Split Taper Bushing on a shaft smaller than the size limits shown in Table 1 may result in a faulty assembly. The assembly may come off the shaft or undesirable assembly runout may result.

3. For light weight Products, the Bushing may first be loosely installed into the BROWNING® split taper bored product, hereafter referred to as "Product", and then the assembly slid onto the shaft (Illustration 1 A & B). For heavier Products, it is usually easier to either first slide the Bushing onto the shaft and then slide the Product onto the Bushing (Illustration 2A), or first position the Product over the shaft, next slide the Bushing onto the shaft, and then pull the Product onto the Bushing (Illustration 2B). The "light weight Products" method is common, however if the Bushing barrel has collapsed, it must be wedged open (described below), and the "heavy Product" procedure may be easier.

Heavier Product may require a hoist or other means of holding the Product in position until the Bushing is installed into the Product. When mounting on a vertical shaft, make sure the Bushing and the Product do not drop during installation.

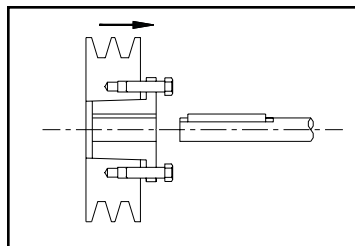


ILLUSTRATION 1A -- S/T ASS'Y,
FLANGE INBOARD

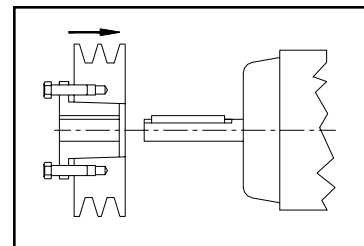


ILLUSTRATION 1B -- S/T ASS'Y,
FLANGE OUTBOARD

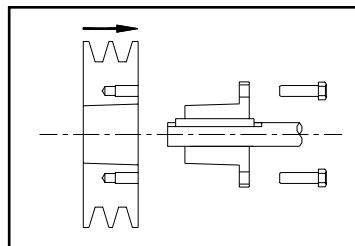


ILLUSTRATION 2A -- S/T COMPONENTS,
FLANGE INBOARD

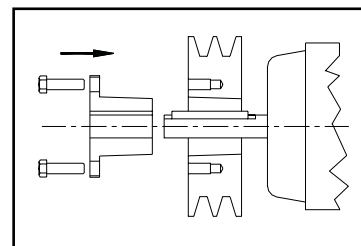


ILLUSTRATION 2B -- S/T COMPONENTS,
FLANGE OUTBOARD

4. It may be necessary to slightly wedge open the saw slot on some Bushings in order to start the bore and position the bushing onto the shaft. A narrow edged regular screw driver may be used.

⚠ CAUTION

Excessive wedging forces in Bushing saw slot may damage or break Bushing. AVOID.

5. Align the shaft keyseat with the Bushing bore keyway and install the key. Make sure the key runs the entire length of the bushing bore.

For Type 2 Bushings except G & H, a key, which protrudes through the Bushing and into the Product, is provided. Some Type 1 Bushings with shallow keyways are also supplied with shaft keys. For proper operation use the key(s) supplied with the Bushing. No keys are required for BROWNING® Idler Bushings.

6. Position the Product so the keyway in the bore of the Product is aligned with the external (barrel) key in the Bushing (G, H, and Idler Bushings do not have an external key). Whether the Bushing has an external key or not, the threaded holes in the Product must be aligned with the non-threaded holes in the Bushing flange. Insert the cap screws through the non-threaded holes in the Bushing flange and thread them by hand into the Product three or four turns.
7. Position the Bushing - Product assembly axially on the shaft such that it is aligned with its running mate. Be sure to check for adequate clearance between the assembly and other nearby components if applicable. If the Bushing has a set screw over the keyway, tighten it to the torque value in Table 2.

⚠CAUTION

Tightening the set screw to a torque higher than shown in Table 2 may lead to Bushing damage or breakage. AVOID.

8. If the Bushing - Product assembly is not between the shaft bearings, then locating the assembly closer to a bearing will reduce the load and increase the life of both bearings. Check for adequate clearance as stated in Step 7.
9. Using a torque wrench and appropriate socket, tighten the cap screws sequentially until each is tightened to the torque shown in Table 2. When the cap screw torque is at or near recommended torque, make at least two more sequential rounds to assure all cap screws are at the Table 2 cap screw torque value.

⚠CAUTION

Tightening the cap screw to a torque higher than shown in Table 2 may lead to Product failure. AVOID.

10. If cap screws were provided with the Product, use them instead of the ones provided with the Bushing.

⚠CAUTION

Failure to use the cap screws that came with the Product may lead to an unsafe assembly. AVOID.

11. Since tightening the cap screws may affect the axial position of the Product, confirm that it is still properly aligned with its running mate. If not, determine how much the assembly must be moved to be in proper alignment.
12. If axial adjustment is required, (following REMOVAL procedure), reposition the assembly, and repeat step 9.

13. Check installation gap - There must be a gap between the Bushing flange and the Product face. If there is no gap between them, disassemble the parts (following REMOVAL procedure) and determine the reason(s) for the faulty assembly.



⚠WARNING

Operating drives without guards in place can result in severe injury or death.

REMOVAL:

1. Heavier Product may require a hoist or other means of supporting the Product during the removal procedure. When removing from a vertical shaft, make sure the Bushing and Product do not drop during removal.
2. Remove all cap screws sequentially. If the Bushing has a keyway set screw, loosen it.
3. Insert cap screws in all threaded Bushing flange holes. Tighten the cap screws against the (hub) face of the Product until the screw force releases the Product from the Bushing.
4. Remove the Bushing and Product from the shaft using appropriate means.

Table 1
SHAFT SIZE LIMITS FOR BROWNING® SPLIT TAPER BUSHINGS

Shaft Size Range (IN)		Lower Shaft Size Limit (IN)	Shaft Size Range (MM)		Lower Shaft Size Limit (MM)
Above	Through		Above	Through	
—	1 1/2	-0.003	—	38.1	-0.076
1 1/2	2 1/2	-0.004	38.1	63.5	-0.102
2 1/2	4	-0.005	63.5	101.6	-0.127
4	6	-0.006	101.6	152.4	-0.152
6	8	-0.007	152.4	203.2	-0.178
8	9	-0.008	203.2	228.6	-0.203
9	—	-0.009	228.6	—	-0.229

Note: Upper limit is + 0 whether units are INCHES or MILLIMETERS.

Table 2
TIGHTENING TORQUES

Bushing	SAE Grade 5 Cap Screw		Cap Screw Torque			Set Screw Size	Set Screw Torque		
	No.	Size	(In-Lbs)	(Ft-Lbs)	(N-M)		(In-Lbs)	(Ft-Lbs)	(N-M)
G; H	2	1/4 - 20NC	95	8	10.7	—	—	—	—
P; B	3	5/16 - 18NC	192	16	21.7	—	—	—	—
Q	3	3/8 - 16NC	348	29	39.3	5/16 - 18NC*	165*	13.8*	18.6*
R	3	3/8 - 16NC	348	29	39.3	5/16 - 18NC	165	13.8	18.6
S	3	1/2 - 13NC	840	70	94.9	3/8 - 16NC	290	24.2	32.8
U	3	5/8 - 11NC	1680	140	189.8	3/8 - 16NC	290	24.2	32.8
W	4	3/4 - 10NC	3000	250	339.0	1/2 - 13NC*	620*	51.7*	70.1*
YO	4	1 - 8NC	7200	600	813.5	1/2 - 13NC*	620*	51.7*	70.1*

(N-M) = Newton Meters

*Q3 Type 2 Bushings only; W1, W2, & YO Type 1 Bushings Only.

Idler Bushings have no set screws.

Have questions? Contact Technical Services at 1-800-626-2093.



BROWNING

Emerson Power Transmission

MAYSVILLE, KENTUCKY 41056