

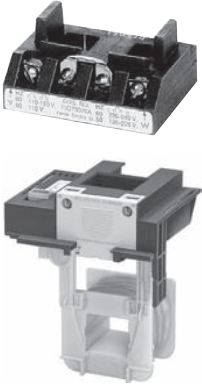
Starters and Contactors – DC Coils, Late Break Aux Contacts, Rectifiers, Contact Kits

Selection

Ordering Information

4th character of starter or contactor catalog number indicates model.
DC Coils for Size 00-4 require Late Break Interlock.

DC Coils — For Class 14, 17, 18, 22, 25, 26, 30, 32, 40, 43

	Size	Model	Volts DC	Catalog Number	List Price \$
	00-2½	P U (ESP200)	12 24 32 48 125 250	75D73070R 75D73070S 75D73070T 75D73070U 75D73070V 75D73070W	
	3, 3½	P U (ESP200)	12 24 32 48 125 250	75D73251R 75D73251S 75D73251T 75D73251U 75D73251V 75D73251W	
	4	G U (ESP200)	48 125 250	75D70131U 75D70131V 75D70131W	
	4, 5	V (Vacuum)	23-26 42-48 110-127 240-277	3RT1966-5AB31 3RT1966-5AD31 3RT1966-5AF31 3RT1966-5AU31	

Note: For sizes 7 & 8 contactors the AC coils are used for DC see page 9/129.

Late Break Auxiliary Contacts

	Control Size	Model	Catalog Number	List Price \$
	00-4	P, G, S, T	49AB01LB	

Board for Size 8 Contactor

	Control Size	Model	Catalog Number	List Price
	8	H	49ZP1650	

Contact Kits – Single Pole Stationary and Movable Contacts, Contact Spring^①

Description	Size	Number of Poles in Kit	Model (4th position in part number)	Catalog Number	List Price \$
	Internal Aux Contact (00-1-¾)		P, U P, U P, U	75AF14 75BF14 75CF14	
	1		P, U P, U	75DF14 75EF14	
	1½-1P	1	P, U P, U	75DF14 75EF14	
	2	1	P, U	75FP14	
	2½	1	P, U	75GP14	
	3		P, U P, U	75HF14 75IF14	
	3½	1	P, U P, U	75HF14 75IF14	
	4	1	G, T V, C	75JG14 3RT1964-6V	
	4 (Vacuum)	3 (Bottles)	P V, C	3RT1966-6A 3RT1966-6V	
	5	3	P V, C	3RT1976-6A 3RT1976-6V	
Class 14, 17, 18, 22, 25, 26, 30, 32, 36, 37, 40, 43, 83, 84, 87, 88 14, 40	5 (Vacuum)	3 (Bottles)	P V, C	3RT1976-6A 3RT1976-6V	
	6	3	P V, C	3RT1976-6A 3RT1976-6V	
	6 (Vacuum)	3 (Bottles)	P V, C	3RT1976-6A 3RT1976-6V	
	7	3	H	49ZL750	
	8	3	H	49ZL1650	

Armature and Magnet Kits

Size	Catalog Number	List Price \$
00-2½	49AMSA2	
3-3½	49AMSA3	
4	49AMSA4	

① On 3-phase controls, all 3-poles should be replaced -
3 kits required.