


ADJUSTABLE ELBOWS/ANGLES

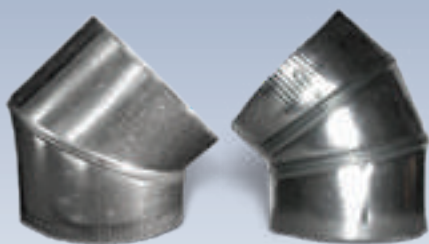

ADJUSTABLE ANGLE

RX50xxyyz

xx = 03-36 (Diameter)

yy = 30, 26, 24 or 22 (GA)

z = 3P (3 piece), 2pc. stndrd



LONG RADIUS ELBOW

RX54xxyy

xx = 03-20 (Diameter)

yy = 26 or 24 (GA)



STRAIGHT BOXED PACKAGING

ADJUSTABLE ELBOW

RX53xxyyz

xx = 03-36 (Diameter)

yy = 30, 28, 26, 24 or 22 (GA)

zz = SB (Straight boxed)

SR (Straight racked)



SHEET METAL STARTING COLLARS



SHORT STARTING COLLAR

RX10xx (412) No Crimp

RX11xx (413) Crimped

xx = 04-40 (Diameter)



LONG STARTING COLLAR

RX12xx (416)

RX13xx (416D) w/Damper

xx = 04-36 (Diameter)

Options: RG (Solid Ring)
S (Scoop)

TABLOC LONG STARTING COLLAR

RX12Txx (416T)

RX13Txx (416TD)

w/Damper

xx = 04-20 (Diameter)

Ships nested. Quick tabloc wont release!



FLEX CONNECTOR

RX58xxzz

xx = 03-24 (Diameter)

zz = 30, 26 (GA)

Used to join short pieces of flex.



CONNECTOR W/WAVEY WASHER

RX58Rxx

xx = 03-24 (Diameter)

High-friction couplers allow damper adjustment from register opening.




SHORT STARTING COLLAR WITH SOLID RING

RX10Rxx (412R) No Crimp

RX11Rxx (413R) Crimped

xx = 04-40 (Diameter)

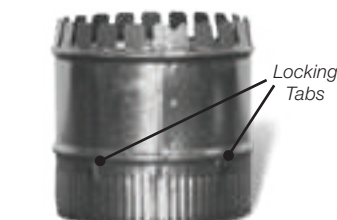

LONG CLINCH STARTING COLLAR

RX14xx (417)

xx = 04-28 (Diameter)

xx = 04-28 (Diameter)

LONG ROTH STARTING COLLAR

RX16xx (413R)

Medium sized body (4" long)

xx = 03-24 (Diameter)



ROUND END CAP

RX21xxzz (421) No Crimp

RX22xxzz (422) Crimped

xx = 03-24 (Diameter)

zz = 22, 24 (GA) Blank = 26GA



ROUND FLEX CONNECTOR

DX36Rxx

xx = 03-24 (Diameter)

Provides isolation of furnace and air handler vibration and noise from round duct systems.