Auxiliary Contacts







Internal Auxiliary



External Single-Circuit Auxiliary Contact

Auxiliary Contacts for Manual and Magnetic Contactors and Starters

Internal Contacts

Class 9999 Type SX11 internal contact kit is a replacement unit for the N.O. holding circuit contact supplied as standard on Type S Sizes 00–2 three phase starters and contactors. The Class 9999 Type SX12 is a replacement unit for the N.C. electrical contact which is furnished as standard on Type S, Sizes 00–2 mechanically interlocked devices (a.g. Class 9725 representation of the N.C.) devices (e.g., Class 8736 reversing starters). Internal contacts are also used on Class 2510 Types M & T manual starters. The internal contacts can be used for other applications as long as the electrical rating is not exceeded. See Table 16.341 for electrical ratings.

External Contacts

Class 9999 Type SX6 external auxiliary contact is supplied as standard for the N.O. holding circuit contact on Type S Sizes 3–7 starters and contactors. Additional auxiliary contacts can be added to Type S contactors, starters and lighting contactors. These contacts mount on either side of the basic contactor and are available with convertible or non-convertible contacts. The contacts of the convertible version can be changed from N.O. to N.C. or vice versa in the field. The non-convertible version has fixed contacts. either N.O. or N.C.

To determine the number of auxiliary contacts that can be added to each Type S contactor or starter, refer to the Class 8536 or Class 8736 section.

See Table 16.341 for electrical ratings.

Table 16.341: Maximum Ratings for Type S Auxiliary Contacts and Timers

Oleres	Contact Ratings				01	Contact Ratings			
Class 9999 Type	Volts		Only er Factor)	Continuous	Class 9999 Type	Volts AC		AC Only (35% Power Factor) Co	
.,,,,,	AC	Make	Break		.,,,,,	AC	Make	Break	
SX11. SX12	120 or Less	30 A	3 A	3 A	SX6-SX10	120 or Less	60 A	6 A	10 A
3811, 3812	120-600	3600 VA	360 VA	3 A	SX13-SX16	120-600	7200 VA	720 VA	10 A

Table 16.342: Class 8502, 8536 and 8903 Type S

For Use With		100.5	Ordering Information		
Type NEMA Size		Kit Description	Class 9999 Type		
External—Fie	External—Field Convertible				
SA-SJ	00–7	1-N.O. Contact 1-N.C. Contact 1-N.O. and 1-N.C. Isolated Contacts 1-N.O. Overlapping Contact 1-N.C. Overlapping Contact	\$X6 \$X7 \$X8 — \$X10 [7]		
External—Non-Convertible					
SA-SJ 00–7 1-N.O. Contact 1-N.C. Contact 1-N.C. Contact 1-N.O. & 1 N.C. Isolated Contacts 1-N.O. Overlapping Contact 1-N.C. Overlapping Contact		1-N.C. Contact 1-N.O. & 1 N.C. Isolated Contacts 1-N.O. Overlapping Contact	SX13 SX14 — —		
Internal—Non-Convertible					
SA-SD	00–2	1-N.O. Contact 1-N.C. Contact	SX11 [8] SX12 [8]		

Table 16.344: Class 8910 and 8911 Definite Purpose Contactors and Starters—Auxiliary Contacts

Device To Be Serviced	Auxiliary Contact Kit			
Class 8910 or	Contact	Class 9999		
8911 Type	Arrangement	Series B (20-90 A)	Series C (20-40 A)	
	1 N.O.	D10	DD10	
DPA	1 N.C.	D01	DD01	
DPS	1 N.O./1 N.C.	D11	DD11	
	2 N.O.	D20	DD20	

Table 16.343: Class 8965 Reversing/Hoist Contactors— **Auxiliary Contacts**

Device To Be Serviced	Auxiliary Contact Kit				
Class 8965 Type	Contact Arrangement	Type of Connector	Class 9999 Type		
	1 N.O.		D10		
DPR	1 N.C.	Screw/	D01		
DPR	1 N.O./1 N.C. Quick-Connect		D11		
	2 N.O.		D20		
RO2 & RG2 RO10 Form X1 RO11 Form X1	1 N.O. each side	Slip-on	_		
RO3 & RG3 RO10 Form X2 RO11 Form X2	1 N.C. each side	Зір-оп	_		
RO5 & RG5 RO12 Form X1 RO13 Form X1	1 N.O. each side	Corour	_		
RO6 & RG6 RO12 Form X2 RO13 Form X2	1 N.C. each side	Screw	_		

Table 16.345: How to Order

To Order Specify:	Catalog Number		
Class Number	Class	Туре	
Type Number	9999	SX6	

Type SX10 must be used together and mounted on the same side of the contactor. They are suitable for applications where it is necessary for a normally open contact to overlap a normally [7] closed contact.

Types SX11 and SX12 are not for use on NEMA Sizes 3 or larger. Internal contacts can also be used on Class 2510 Types M and T manual starters.