


## IX SERIES

### IP Video Intercom System

## Quick Start Programming Guide

IX Support Tool  
Version 7.1.0.0 or later

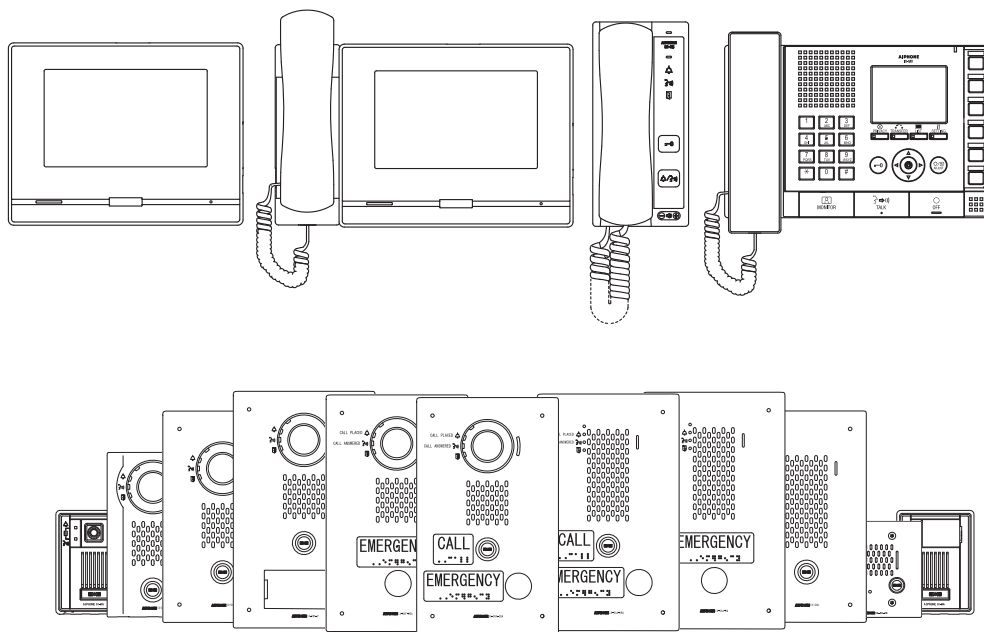

#### ATTENTION:

This is an abbreviated programming manual addressing basic program settings for an IX System using the IX Support Tool. A complete set of instructions (*IX Web Setting Manual / IX Operation Manual / IX Support Tool Setting Manual*) can be found at [www.aiphone.net](http://www.aiphone.net). In North America for additional literature and media, visit [www.aiphone.com/IX](http://www.aiphone.com/IX).

# General Overview

## Table of Contents

|                   |                                                                                                                                                                   |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Pages 4-8</b>  | <b>Programming a New System</b><br>- Quickly creating a new system using the Support Tool Programming Wizard                                                      |
| <b>Page 9</b>     | <b>Adding a New Station</b><br>- Adding a new IX station to an <b>existing system</b>                                                                             |
| <b>Page 10-11</b> | <b>IXW-MA Relay Output Settings</b><br>- Configuring the relay outputs of an IXW-MA                                                                               |
| <b>Page 12-14</b> | <b>Door Call-in Destination and Master Address Book Settings</b><br>- Customizing door station call-in destinations and partitioning master station Address Books |
| <b>Page 15-17</b> | <b>Call Transfer Settings</b><br>- Configuring up Absent, Delayed, and Scheduled Transfers                                                                        |
| <b>Page 18-21</b> | <b>IP Camera Integration</b><br>- Adding a 3rd party IP camera to a system and registering to stations                                                            |
| <b>Page 22-23</b> | <b>Timer Settings</b><br>- Adjust the default timer settings for door station call-in, communication timeout, and door release.                                   |

## Getting Started


IX Series stations are set to the **default IPv4 address of 192.168.1.160**. The Support Tool programming software is designed to batch configure all IX stations simultaneously, finding each device on the network by its MAC address. The IX Series is designed to function on managed networks, however the broadcast method used to find stations may not function properly in this environment.

It is possible that a secondary NIC card, such as a VPN or WiFi connection, may prevent Support Tool from finding stations during its station search process when attempting to associate (*page 4*) or upload to stations (*page 7*). Disabling any secondary connections before programming may prevent these issues.

When using Support Tool's programming wizard, each station is given default network and station information, and configures all stations to call, communicate, and activate door release. Additional settings are available once the programming has been completed using the wizard.

## Installation Recommendations

Place all IX Series stations on the same unmanaged, PoE network switch and wait for each station to power on before launching Support Tool. Stations programmed this way can then be removed from this environment and deployed without losing their configuration data.

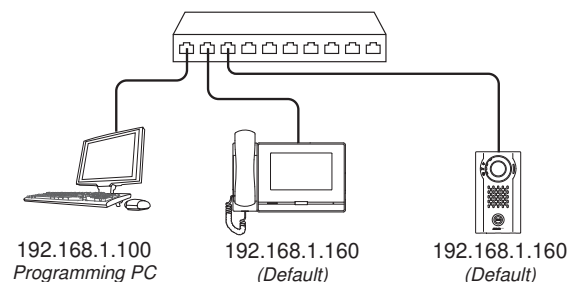


- ☐ Support Tool has been downloaded and installed.  
*Support Tool (v7.1.0.0 or later) can be downloaded from <https://www.aiphone.net/support/software-documents/ix/>*
- ☐ The PC and the IX Series stations have been connected to a PoE switch and have completed their boot up process.
- ☐ A list of Station Names, Station Numbers, and network information is gathered from the end user.
- ☐ The network environment, potential 3rd party port or IP conflicts, and access to administrative rights on the programming PC have been taken into consideration and addressed.

# Programming a New System

## Creating a System

To create a New System using the Programming Wizard, launch Support Tool and enter the ID and Password. If this is the first time Support Tool is launched the New System programming window will automatically open. If an existing program file is currently in use, choose **File(F) > Create New System**.

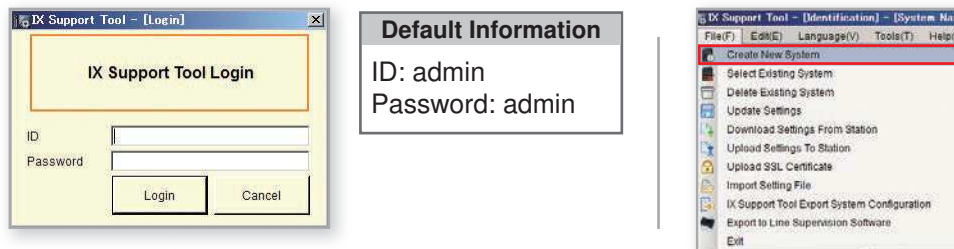

### Step 1: System Settings

**System Name, Installer Information, Owner Information, and Notes** are customizable fields that uniquely identify the system being created.

**IP Version:** Select the IP version from the drop-down.

**Expanded System:** Select only when system capacity exceeds 500 stations.

*Additionally, an Expanded System can be used when registering stations to a SIP server that requires extension numbers larger than 5 digits.*

**Door Release:** Yes should be selected, even when using the IXW-MA relay adaptor.

*Selecting No will disable door release and require manual configuration not covered in this document.*

**System ID / Password:** Select an ID and Password that will be given to each station.

*Individual and unique ID and Passwords can be set for each station once the Wizard programming is complete.*

Enter the quantities of each station that will be part of the system. Station types without values should remain blank.

**IX-MV7-\*:** IX-MV7-HB, IX-MV7-HW, IX-MV7-B, IX-MV7-W

**IX-DV, IX-DVF(-\*):** X-DVF-P, IX-DVF-2RA, IX-DVF-RA

**IX-DA, IX-DF(-\*):** IX-DF-HID, IX-DF-RP10, IX-DF-2RA

**IX-SSA(-\*):** IX-SSA-2RA, IX-SSA-RA

**IX-SS(-\*):** IX-SS-2RA, IX-SS-RA

**IX-RS-\*:** IX-RS-B, IX-RS-W

*IX-EA, IX-EAU, and IX-SPMIC are only available in Japan.*

# Programming a New System

## Step 2: Station Customization - Optional

Support Tool will provide each station a default Station Name, four-digit Station Number, and IP Address starting from 192.168.1.10. To edit this information, click **Station Details**. To use the default information, Click **Next**.

### System Configuration

1. Select the setting file to be linked with the chosen station:

| Station Settings List            |        |                      |          |                   |          |              |            |
|----------------------------------|--------|----------------------|----------|-------------------|----------|--------------|------------|
| Select                           | Number | Name                 | Location | Station Type      | Hostname | IP Address   | Associated |
| <input checked="" type="radio"/> | 0001   | Master Stations1     |          | IX-MV7-*          |          | 192.168.1.10 | -          |
| <input type="radio"/>            | 0002   | Master Stations2     |          | IX-MV7-*          |          | 192.168.1.11 | -          |
| <input type="radio"/>            | 0003   | Master Stations3     |          | IX-MV             |          | 192.168.1.12 | -          |
| <input type="radio"/>            | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-*) |          | 192.168.1.13 | -          |
| <input type="radio"/>            | 0005   | Video Stations2      |          | IX-DA             |          | 192.168.1.14 | -          |
| <input type="radio"/>            | 0006   | Audio Stations1      |          | IX-SS-2G          |          | 192.168.1.15 | -          |
| <input type="radio"/>            | 0007   | Handset Sub Station1 |          | IX-RS-*           |          | 192.168.1.16 | -          |
| <input type="radio"/>            | 0008   | I/O Adaptor1         |          | IXW-MA            |          | 192.168.1.17 | -          |

Advanced Settings

Address Book

Door Release

Station Details

Batch IP Address Configuration

System Management

Add New Station

Station Removal

Note:

 Door release settings will be automatically configured unless otherwise disabled manually.

### Station Details

Edit Number, Name, and IP Address by clicking on **Station Details**.

### Address Book

Select which stations are displayed in each Master Station's address book.

### Door Release

Individually partition, enable, or disable door release access. (enabled by default)

### Optional Settings

### Batch IP Address

Batch configure network information by station type or for all stations

## Editing Default Station Details (Optional)

Clicking **Station Details** will open a second screen where the default system information, the addressing method can be changed to DHCP, and Hostnames can be added. Click, **OK** to continue.

### Station Details

Row

Previous

Next

Display

Changing the IP Address, Subnet Mask, IP Version, Static / DHCP will require a restart of the system. Once associated, the setting file will also need to be uploaded to the station(s). Locations must be created in the Location Registry before they can be assigned to a station.

Text in red are required settings.

| #    | Station Information |                  |          |                   | Network Settings |            |               |              |     |   |    |             |     |     |   |
|------|---------------------|------------------|----------|-------------------|------------------|------------|---------------|--------------|-----|---|----|-------------|-----|-----|---|
|      | Identification      |                  |          |                   | IP Address       |            |               |              |     |   |    |             |     |     |   |
|      | Number              | Name             | Location | Station Type      | Hostname         | IP Version | Static / DHCP | IPv4 Address |     |   |    |             |     |     |   |
|      |                     |                  |          |                   |                  |            |               | IP Address   |     |   |    | Subnet Mask |     |     |   |
|      | 1                   | 2                | 3        | 4                 | 1                | 2          | 3             | 4            |     |   |    |             |     |     |   |
| 0001 | 0001                | Master Stations1 |          | IX-MV7-*          |                  | IPv4       | Static        | 192          | 168 | 1 | 10 | 255         | 255 | 255 | 0 |
| 0002 | 0002                | Master Stations2 |          | IX-MV7-*          |                  | IPv4       | Static        | 192          | 168 | 1 | 11 | 255         | 255 | 255 | 0 |
| 0003 | 0003                | Master Stations3 |          | IX-MV             |                  | IPv4       | Static        | 192          | 168 | 1 | 12 | 255         | 255 | 255 | 0 |
| 0004 | 0004                | Video Stations1  |          | IX-DV, IX-DVF(-*) |                  | IPv4       | Static        | 192          | 168 | 1 | 13 | 255         | 255 | 255 | 0 |

Location Registry

OK

Cancel

Note:

 Changes made during this step will not be applied until the programming process has been completed.

**Station Number:** 3-5 Digits

**Station Name:** 24 characters max

**Static / DHCP:** Connection to the DHCP server by the programming PC is required to assign IP addresses to each station. If this is not possible, speak to the network administrator about DHCP reservations and assign these reservations statically.

**Hostname:** Do not enter a Hostname if an IPv4 or IPv6 address is already set for the station.

# Programming a New System

## Step 3: Association

The association process is where the station information created in the previous steps (Station Setting List) is associated with a station found on the network (Station List). Choose one of two methods, Automatic (*recommended*) or Manual.

Once associated, the station will receive its Station Name and network information after a short power cycle, but a final upload of the setting file will be needed before the stations are functional.

### Automatic (Recommended)

Clicking the Associate Automatically button will pair a station from the top Station Settings List to the same type of station in the Station List below it at random.

### System Configuration

1. Select the setting file to be linked with the chosen station:

| Select                           | Number | Name                 | Location | Station Type      | Hostname | IP Address   | Associated |
|----------------------------------|--------|----------------------|----------|-------------------|----------|--------------|------------|
| <input checked="" type="radio"/> | 0001   | Master Stations1     |          | IX-MV7-*          |          | 192.168.1.10 | -          |
| <input type="radio"/>            | 0002   | Master Stations2     |          | IX-MV7-*          |          | 192.168.1.11 | -          |
| <input type="radio"/>            | 0003   | Master Stations3     |          | IX-MV             |          | 192.168.1.12 | -          |
| <input type="radio"/>            | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-*) |          | 192.168.1.13 | -          |
| <input type="radio"/>            | 0005   | Video Stations2      |          | IX-DA, IX-DF(-*)  |          | 192.168.1.14 | -          |
| <input type="radio"/>            | 0006   | Audio Stations1      |          | IX-SS-2G          |          | 192.168.1.15 | -          |
| <input type="radio"/>            | 0007   | Handset Sub Station1 |          | IX-RS-*           |          | 192.168.1.16 | -          |
| <input type="radio"/>            | 0008   | I/O Adaptor1         |          | IXW-MA            |          | 192.168.1.17 | -          |

2. Select the station to associate with the setting file.

☐ Enter station MAC address:  ☐ Different Networks

☒ Search and select station within local network: Station Search Protocol IPv4

| Select                           | Number | Name | Location | Station Type      | MAC address       | Associated |
|----------------------------------|--------|------|----------|-------------------|-------------------|------------|
| <input checked="" type="radio"/> |        |      |          | IX-MV7-*          | 00:0B:AA:2F:02:1A | -          |
| <input type="radio"/>            |        |      |          | IX-MV7-*          | 00:0B:AA:2F:01:AE | -          |
| <input type="radio"/>            |        |      |          | IX-MV             | 00:0B:AA:17:1B:BA | -          |
| <input type="radio"/>            |        |      |          | IX-DV, IX-DVF(-*) | 00:0B:AA:28:06:75 | -          |
| <input type="radio"/>            |        |      |          | IXW-MA            | 00:0B:AA:2E:00:01 | -          |
| <input type="radio"/>            |        |      |          | IX-RS-*           | 00:0B:AA:2D:00:14 | -          |
| <input type="radio"/>            |        |      |          | IX-SS-2G          | 00:0B:AA:2C:01:BA | -          |
| <input type="radio"/>            |        |      |          | IX-DA, IX-DF(-*)  | 00:0B:AA:16:04:B7 | -          |

**Note:**

The Station Settings List is the list of stations created by the previous steps. The Station List is the list of stations found on the network.

Click **Associate Automatically**

**Station List**

Stations not shown on the Station List cannot be found by Support Tool. Verify their physical connection, that they have power (PoE), and refer to Page 2 for more information as to why they may not be shown. Click **Station Search** to search the network again.

Scroll Down

| Select                              | Number | Name                 | Location | Station Type      | IP Address   | MAC address       | Status  |
|-------------------------------------|--------|----------------------|----------|-------------------|--------------|-------------------|---------|
| <input checked="" type="checkbox"/> | 0001   | Master Stations1     |          | IX-MV7-*          | 192.168.1.10 | 00:0B:AA:2F:02:1A | Success |
| <input type="checkbox"/>            | 0002   | Master Stations2     |          | IX-MV7-*          | 192.168.1.11 | 00:0B:AA:2F:01:AE | Success |
| <input type="checkbox"/>            | 0003   | Master Stations3     |          | IX-MV             | 192.168.1.12 | 00:0B:AA:17:1B:BA | Success |
| <input type="checkbox"/>            | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-*) | 192.168.1.13 | 00:0B:AA:28:06:75 | Success |
| <input type="checkbox"/>            | 0005   | Video Stations2      |          | IX-DA, IX-DF(-*)  | 192.168.1.14 | 00:0B:AA:16:04:B7 | Success |
| <input type="checkbox"/>            | 0006   | Audio Stations1      |          | IX-SS-2G          | 192.168.1.15 | 00:0B:AA:2C:01:BA | Success |
| <input type="checkbox"/>            | 0007   | Handset Sub Station1 |          | IX-RS-*           | 192.168.1.16 | 00:0B:AA:2D:00:14 | Success |
| <input type="checkbox"/>            | 0008   |                      |          |                   | 168.1.17     | 00:0B:AA:2E:00:01 | Success |

**Firmware Update Popup:**

After a successful association, a popup may open explaining that one or more stations have out of date firmware. See page 7 for more information

### Confirming Status

Confirm each station in the Status column says **Success**. If any status shows as **Failed**, confirm their network connection refer to their status light, then select the station and click **Retry Association**.

### Continue

When all stations show **Success**, click **Next**.

Skip to Page 7 "Setting File Upload"

# Programming a New System

## Step 3: Association

### Manual

Manual Association allows the selection of a station by MAC address to pair with a station of the same type from the top [Station Setting List](#) and the [Station List](#) below it.

When the stations have been associated, scroll to the bottom of this page to review the [Associated Station List](#), and confirm each station's status. **This is only the recommended association method for stations that have already been deployed.**

#### Select

Select a created station from the [Station Settings List](#).

#### Select

Select a discovered station from the [Station List](#) to associate to.

### System Configuration

1. Select the setting file to be linked with the chosen station:

| Select                           | Number | Name                 | Location | Station Type      | Hostname | IP Address   | Associated |
|----------------------------------|--------|----------------------|----------|-------------------|----------|--------------|------------|
| <input checked="" type="radio"/> | 0001   | Master Stations1     |          | IX-MV7-*          |          | 192.168.1.10 | -          |
| <input type="radio"/>            | 0002   | Master Stations2     |          | IX-MV7-*          |          | 192.168.1.11 | -          |
| <input type="radio"/>            | 0003   | Master Stations3     |          | IX-MV             |          | 192.168.1.12 | -          |
| <input type="radio"/>            | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-*) |          | 192.168.1.13 | -          |
| <input type="radio"/>            | 0005   | Video Stations2      |          | IX-DA, IX-DF(-*)  |          | 192.168.1.14 | -          |
| <input type="radio"/>            | 0006   | Audio Stations1      |          | IX-SS-2G          |          | 192.168.1.15 | -          |
| <input type="radio"/>            | 0007   | Handset Sub Station1 |          | IX-RS-*           |          | 192.168.1.16 | -          |
| <input type="radio"/>            | 0008   | I/O Adaptor1         |          | IXW-MA            |          | 192.168.1.17 | -          |

Note: The Station Settings List is the list of stations created by the previous steps. The Station List is the list of stations found on the network.

2. Select the station to associate with the setting file.

☐ Enter station MAC address:  ☐ Different Networks

☒ Search and select station within local network:

| Select                           | Number | Name | Location | Station Type      | MAC address       | Associated |
|----------------------------------|--------|------|----------|-------------------|-------------------|------------|
| <input checked="" type="radio"/> |        |      |          | IX-MV7-*          | 00:0B:AA:2F:02:1A | -          |
| <input type="radio"/>            |        |      |          | IX-MV7-*          | 00:0B:AA:2F:01:AE | -          |
| <input type="radio"/>            |        |      |          | IX-MV             | 00:0B:AA:17:1B:BA | -          |
| <input type="radio"/>            |        |      |          | IX-DV, IX-DVF(-*) | 00:0B:AA:28:06:75 | -          |
| <input type="radio"/>            |        |      |          | IXW-MA            | 00:0B:AA:2E:00:01 | -          |
| <input type="radio"/>            |        |      |          | IX-RS-*           | 00:0B:AA:2D:00:14 | -          |
| <input type="radio"/>            |        |      |          | IX-SS-2G          | 00:0B:AA:2C:01:BA | -          |
| <input type="radio"/>            |        |      |          | IX-DA, IX-DF(-*)  | 00:0B:AA:16:04:B7 | -          |

Apply Associate Automatically Station Search

#### Associate

Click **Apply** to associate the selected station with the selected file. Repeat until all stations are associated.

Scroll Down

Scroll Down

### Associated Stations List

| Select                   | Number | Name                 | Location | Station Type      | IP Address   | MAC address       | Status  |
|--------------------------|--------|----------------------|----------|-------------------|--------------|-------------------|---------|
| <input type="checkbox"/> | 0001   | Master Stations1     |          | IX-MV7-*          | 192.168.1.10 | 00:0B:AA:2F:02:1A | Success |
| <input type="checkbox"/> | 0002   | Master Stations2     |          | IX-MV7-*          | 192.168.1.11 | 00:0B:AA:2F:01:AE | Success |
| <input type="checkbox"/> | 0003   | Master Stations3     |          | IX-MV             | 192.168.1.12 | 00:0B:AA:17:1B:BA | Success |
| <input type="checkbox"/> | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-*) | 192.168.1.13 | 00:0B:AA:28:06:75 | Success |
| <input type="checkbox"/> | 0005   | Video Stations2      |          | IX-DA, IX-DF(-*)  | 192.168.1.14 | 00:0B:AA:16:04:B7 | Success |
| <input type="checkbox"/> | 0006   | Audio Stations1      |          | IX-SS-2G          | 192.168.1.15 | 00:0B:AA:2C:01:BA | Success |
| <input type="checkbox"/> | 0007   | Handset Sub Station1 |          | IX-RS-*           | 192.168.1.16 | 00:0B:AA:2D:00:14 | Success |
| <input type="checkbox"/> | 0008   | I/O Adaptor1         |          | IXW-MA            | 192.168.1.17 | 00:0B:AA:2E:00:01 | Success |

Remove Association Retry Association Back Next Cancel

Firmware Update PopUp: After a successful association, a popup may open explaining that one or more stations have out of date firmware. See page 7 for more information

#### Confirming Status

Confirm each station in the Status column says **Success**. If any status shows as **Failed**, confirm their network connection refer to their status light, then select the station and click **Retry Association**.


#### Continue

If all stations show **Success**, click **Next**.

## Firmware Update Popup

### Firmware Update

During the association step (page 5/6), Support Tool may indicate that the current version of one or more of the stations requires a firmware update before continuing. **If this popup was not displayed, continue with the next step.**

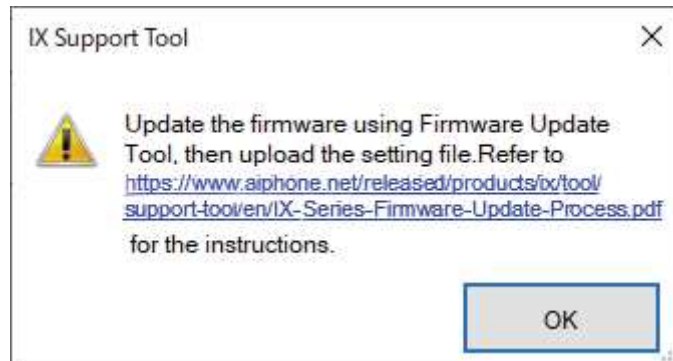

This message will appear for the following station types and their respective firmware:

- **IX-MV7-\*, IX-RS-\*, IX-DV, IX-DVF-\*, IX-SSA-\*, and IX-SS-2G v3.xx or older**
- **IX-MV, IX-BA, IX-DA, and IX-DF-\* v4.xx or older**
- **IXW-MA v3.xx or older / 9.0x**

*Stations with firmware v5.xx or newer and IXW-MAs with firmware v9.20 or newer do not require an update.*

### Firmware Upgrade Tool

To update these stations to the appropriate firmware a separate software is needed. The required firmware, the Firmware Upgrade Tool, and its quick start guide can be found here [\[link\]](#).

Much of the firmware update process is automated, and can be quickly completed if the stations have been associated using the previous step. Once the firmware has been updated, return to this quick start guide to complete the initial programming process and further steps on configuring the system.



Once the station's firmware has been updated, or if the stations do not require a firmware update, continue to the next page.

# Programming a New System

## Step 4: Setting File Upload

Once each station has been associated with its individual station information, the setting file containing the rest of the system's configuration will need to be uploaded to each station. **To upload the setting file, the programming PC will need to be in the same subnet as the associated stations (refer to Step 3).**

| Select                              | Number | Name             | Location | Station Type      | IP Address   | Status    |
|-------------------------------------|--------|------------------|----------|-------------------|--------------|-----------|
| <input checked="" type="checkbox"/> | 0001   | Master Stations1 |          | IX-MV7-*          | 192.168.1.10 | Available |
| <input checked="" type="checkbox"/> | 0002   | Master Stations2 |          | IX-MV7-*          | 192.168.1.11 | Available |
| <input checked="" type="checkbox"/> | 0003   | Master Stations3 |          | IX-MV             | 192.168.1.12 | Available |
| <input checked="" type="checkbox"/> | 0004   | Video Stations1  |          | IX-DV, IX-DVF(-*) | 192.168.1.13 | Available |

### Select Stations

Stations can be selected individually, or by Type. Choose **All** from the **Select Station by Type** drop-down menu to upload to all stations. Then, click **Select**.

### Start Upload

Click **Start Upload** once all stations show an Available status. This may take several minutes as the stations complete their boot up after association.

### Continue

Once all stations have been uploaded to, click **Next**.

## Step 5: Export Settings

The final step of the Programming Wizard is to create a copy of the system's setting file and export it to a secure location or external drive. This final step is critical in the ongoing maintenance of the system that has been created. If settings are to be changed in the future, or new stations are to be added, this file is required to do so.

The system has been successfully configured. Alphone recommends to export and back up the system configuration files and leave them on-site with the end user. This backup can be imported into the IX Support Tool and used to modify the system.

**Export**

**Finish**

Select Folder

Desktop  
OneDrive  
Cody Dix  
This PC  
Libraries  
BACKUP (D:)  
Network  
Control Panel  
Recycle Bin

Make New Folder OK Cancel

### Select Folder

Select location to save the file then click **OK**.

### Export

Click **Export** to select a location to save the system's setting file.

### Finish

Lastly, once the setting file has been saved, click **Finish**.

### Important:

If the original program file is lost, or Support Tool is moved to a different PC, this copy can be used to access the system programming to add or remove a station, or to make programming changes.



# Adding a New Station

## Getting Started

Adding a new station to an existing system requires having the system program file open in Support Tool and a network connection to all existing stations. The new station should be connected to the network and completed its initial boot up process before starting step one.

### Step 1: Opening the System Configuration Settings

From the top menu bar, click **Tools(T)** and select **System Configuration**.

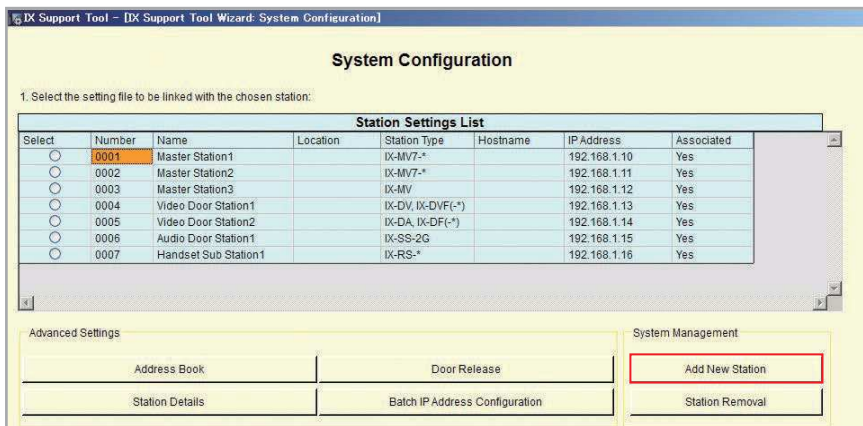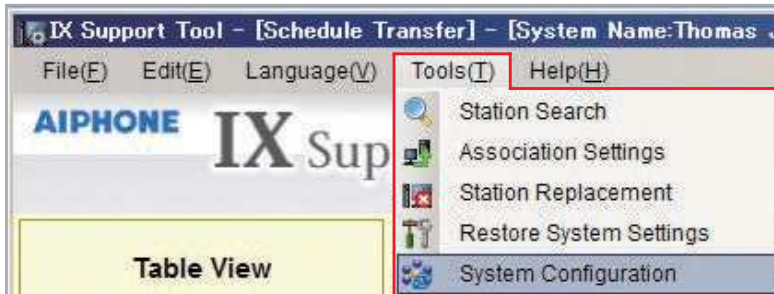


#### Add New Station

Click **Add New Station**

### Step 2: Adding a New Station

One or multiple stations and station types can be added on the Add New Station screen.

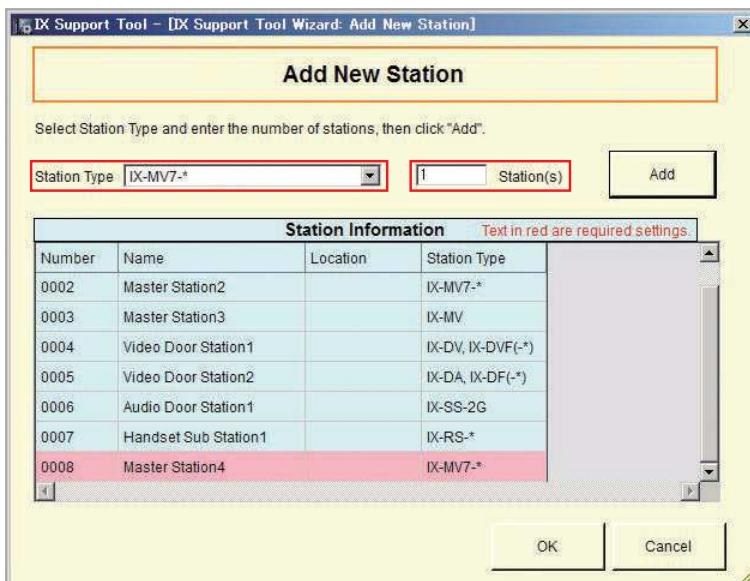

#### Station Type

Use the Station Type drop-down menu to select the Station Type of the new station.

#### Station Quantities

Enter the quantities of stations that are being added to the system.

#### Add the station(s)

Click **Add** to add the station(s) to the Station Information table below.

#### Finished

Click **OK** once all stations of each Station Type has been added.

#### Note:



Refer to page 4 and continue through page 7 to complete the steps for editing the station information, association, and uploading the setting files.

# IXW-MA Settings

## Getting Started

The IXW-MA is an IP relay with 10 configurable outputs that can be remotely triggered by a station based on status conditions defined in Support Tool. Typically, these outputs are used for remote door release or external signalling activation. The following steps detail the configuration for **using the outputs of the IXW-MA for door release**.

*These steps should be followed if the IXW-MA was included when creating a new system. If the IXW-MA needs to be added to the system, refer to page 8 (Adding a New Station) and return to this section once complete.*

### Step 1: SIF Settings

Expand **Function Settings** on the left-hand side menu and select **SIF**. Note that the SIF event trigger for door release is sent by the door station, and not the master station, so the following steps use door stations as examples.

**Table View**

**Station View**

- Station Information
- Network Settings
- System Information
- Call Settings
- Option Input / Relay Output Settings
- Paging Settings
- Function Settings**
  - Door Release
  - Network Camera Integration
  - Paging Settings
  - Bathroom Call
  - Email
  - CGI
  - SIF**
  - Record
  - Communication Audio Message
  - Chime
  - CSR
  - SSL Certificate
  - IEEE 802.1X
  - Display Mode

| Station Information |        |                      |          | Function Settings |                   |                |              |              |      |                  |        |            |
|---------------------|--------|----------------------|----------|-------------------|-------------------|----------------|--------------|--------------|------|------------------|--------|------------|
| Identification      |        |                      |          | SIF               |                   |                |              |              |      |                  |        |            |
| #                   | Number | Name                 | Location | Station Type      | SIF Functionality | SIP URI Format | No.01        |              |      |                  |        |            |
|                     |        |                      |          |                   |                   |                | SIF Settings |              |      |                  |        |            |
|                     |        |                      |          |                   |                   |                | Program Type | IPv4         | IPv6 | Destination Port | SSL    | Connection |
| 0001                | 0001   | Master Stations1     |          | IX-MV7-*          | Disable           | Disable        |              |              |      |                  |        |            |
| 0002                | 0002   | Master Stations2     |          | IX-MV7-*          | Disable           | Disable        |              |              |      |                  |        |            |
| 0003                | 0003   | Master Stations3     |          | IX-MV             | Disable           |                |              |              |      |                  |        |            |
| 0004                | 0004   | Video Stations1      |          | IX-DV, IX-DVF(*)  | Enable            | Disable        | 0100         | 192.168.1.17 |      | 65014            | Enable | Socket     |
| 0005                | 0005   | Video Stations2      |          | IX-DA, IX-DF(*)   | Disable           |                |              |              |      |                  |        |            |
| 0006                | 0006   | Audio Stations1      |          | IX-SS-2G          | Enable            | Disable        | 0100         | 192.168.1.17 |      | 65014            | Enable | Socket     |
| 0007                | 0007   | Handset Sub Station1 |          | IX-RS-*           | Disable           | Disable        |              |              |      |                  |        |            |
| 0008                | 0008   | I/O Adaptor1         |          | IXW-MA            | Disable           | Disable        |              |              |      |                  |        |            |

**SIF Functionality:** Enable for each station interacting with the IXW-MA.

**Program Type:** 0100 for each station.

**IPv4:** Enter the IP address of the IXW-MA.

**Destination Port / SSL:** 65014 when SSL is Enabled (65013 when SSL is Disabled)

**Connection:** Socket

Scroll Right →

Scroll Right →

While still on the **Function Settings > SIF** screen, scroll right to find **Change Contact**.

**AI PHONE IX Support Tool**

Category: Video Station Station Type: IX-DV, IX-DVF(\*)

Table View Row Process Test Display Display Settings No.01 Event View Selection SIF Functionality Upload SIF File Download SIF File Update

**Station View**

| Station Information |        |                      |          | Function Settings |                          |                              |                          |                          |                                     |
|---------------------|--------|----------------------|----------|-------------------|--------------------------|------------------------------|--------------------------|--------------------------|-------------------------------------|
| Identification      |        |                      |          | SIF               |                          |                              |                          |                          |                                     |
| #                   | Number | Name                 | Location | Station Type      | No.01                    |                              |                          |                          |                                     |
|                     |        |                      |          |                   | Transmission Trigger     |                              |                          |                          |                                     |
|                     |        |                      |          |                   | Begin Outgoing Call      | Begin Communication (Source) | Door Release Indication  | End Communication        | Change Contact                      |
| 0001                | 0001   | Master Stations1     |          | IX-MV7-*          | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |
| 0002                | 0002   | Master Stations2     |          | IX-MV7-*          | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |
| 0003                | 0003   | Master Stations3     |          | IX-MV             | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |
| 0004                | 0004   | Video Stations1      |          | IX-DV, IX-DVF(*)  | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 0005                | 0005   | Video Stations2      |          | IX-DA, IX-DF(*)   | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |
| 0006                | 0006   | Audio Stations1      |          | IX-SS-2G          | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| 0007                | 0007   | Handset Sub Station1 |          | IX-RS-*           | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |
| 0008                | 0008   | I/O Adaptor1         |          | IXW-MA            | <input type="checkbox"/> | <input type="checkbox"/>     | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |

#### Change Contact

Check the **Change Contact** box for each station that will communicate with the IXW-MA.

#### Update

Click **Update** to save the SIF and Change Contact settings.

# IXW-MA Settings

## Step 2: IXW-MA Relay Output Configuration

Expand **Option Input / Relay Output Settings** on the left-hand side menu and click **Relay Output**.

Table View: Row, Previous, Next, [Display Settings] Relay Output 1, [Weekly Schedule], [Daily Schedule], [Schedule View Adjustment], 2/14/2019, Display

Station View: Number of Notes: 5

1. Contact Change SIF Event is associated with Change Contact of Relay Output 1 from SIF Origination Station.  
2. When set to blank, it will perform in association with the contact change of Relay Output 1 on all SIF command originating stations.

| Station Information |        |                      |          | Option Input / Relay Output Settings |                          |
|---------------------|--------|----------------------|----------|--------------------------------------|--------------------------|
| Identification      |        |                      |          | Relay Output                         |                          |
| #                   | Number | Name                 | Location | Station Type                         | Relay Output 1           |
|                     |        |                      |          |                                      | Name Function            |
| 0001                | 0001   | Master Stations1     |          | IX-MV7-*                             | Door Release             |
| 0002                | 0002   | Master Stations2     |          | IX-MV7-*                             | Door Release             |
| 0003                | 0003   | Master Stations3     |          | IX-MV                                | Door Release             |
| 0004                | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-)                     | Door Release             |
| 0005                | 0005   | Video Stations2      |          | IX-DA, IX-DF(-)                      | Door Release             |
| 0006                | 0006   | Audio Stations1      |          | IX-SS-2G                             | Door Release             |
| 0007                | 0007   | Handset Sub Station1 |          | IX-RS-*                              | Door Release             |
| 0008                | 0008   | I/O Adaptor1         |          | IXW-MA                               | Contact Change SIF Event |

### Relay Output Selection

Use the Relay Output drop-down menu under **[Display Settings]** to select a relay output.

Default set to Relay Output 1

### Function

Use the Function drop-down menu to select **Contact Change SIF Event** for the IXW-MA.

Scroll Right

Scroll Right

System Namescreenshots: Tools(T) Help(H) Press F1 (or Fn + F1) key

port Tool: [Update]

Row: [Display Settings] Relay Output 1, [Weekly Schedule], [Daily Schedule], [Schedule View Adjustment], 12/11/2019, 1, 3, Change

Number of Notes: 5

1. Contact Change SIF Event is associated with Change Contact of Relay Output 1 from SIF Origination Station.  
2. When set to blank, it will perform in association with the contact change of Relay Output 1 on all SIF command originating stations.

| Station Information |        |                      |          | Option Input / Relay Output Settings |                             |                      |                   |
|---------------------|--------|----------------------|----------|--------------------------------------|-----------------------------|----------------------|-------------------|
| Identification      |        |                      |          | Relay Output                         |                             |                      |                   |
| #                   | Number | Name                 | Location | Station Type                         | Contact Change Station List | Option Relay Control | Output Time Range |
| 0001                | 0001   | Master Stations1     |          | IX-MV7-*                             |                             | Disable              | 200-2000 [msec]   |
| 0002                | 0002   | Master Stations2     |          | IX-MV7-*                             |                             | Disable              | 200-2000 [msec]   |
| 0003                | 0003   | Master Stations3     |          | IX-MV7-*                             |                             | Disable              | 200-2000 [msec]   |
| 0004                | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-)                     |                             | Disable              | 200-2000 [msec]   |
| 0005                | 0005   | Video Stations2      |          | IX-DV, IX-DVF(-)                     |                             | Disable              | 200-2000 [msec]   |
| 0006                | 0006   | Audio Stations1      |          | IX-SSA(-)                            |                             | Disable              | 200-2000 [msec]   |
| 0007                | 0007   | Handset Sub Station1 |          | IX-RS-*                              |                             | Disable              | 200-2000 [msec]   |
| 0008                | 0008   | I/O Adaptor1         |          | IXW-MA                               | Open                        | Disable              | 200-2000 [msec]   |

IX Support Tool - Station List

Select Number

| Select                           | Number | Name                 | Location | Station Type     |
|----------------------------------|--------|----------------------|----------|------------------|
| <input type="radio"/>            | 0001   | Master Stations1     |          | IX-MV7-*         |
| <input type="radio"/>            | 0002   | Master Stations2     |          | IX-MV7-*         |
| <input type="radio"/>            | 0003   | Master Stations3     |          | IX-MV            |
| <input checked="" type="radio"/> | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-) |
| <input type="radio"/>            | 0005   | Video Stations2      |          | IX-DA, IX-DF(-)  |
| <input type="radio"/>            | 0006   | Audio Stations1      |          | IX-SS-2G         |
| <input type="radio"/>            | 0007   | Handset Sub Station1 |          | IX-RS-*          |
| <input type="radio"/>            | 0008   | I/O Adaptor1         |          | IXW-MA           |

OK Cancel

### Contact Change SIF Event

Scroll the window to the right to find the **Contact Change SIF Event** column, and click **Open**.

### Select a Station

In the popup window, select the station to trigger the chosen output on the IXW-MA, then click **OK**.

### Update

Click **Update** to save the settings.

## Step 3: Relay Output Time (Optional)

To allow individual output times for the up to 10 relay outputs, the IXW-MA output times reflect the timer settings of the station interacting with it.

System Namescreenshots: Tools(T) Help(H) Press F1 (or Fn + F1) key

port Tool: [Update]

Row: [Display Settings] Relay Output 1, [Weekly Schedule], [Daily Schedule], [Schedule View Adjustment], 12/11/2019, 1, 3, Change

Number of Notes: 5

1. Contact Change SIF Event is associated with Change Contact of Relay Output 1 from SIF Origination Station.  
2. When set to blank, it will perform in association with the contact change of Relay Output 1 on all SIF command originating stations.

| Station Information |        |                      |          | Option Input / Relay Output Settings |                             |                      |                   |
|---------------------|--------|----------------------|----------|--------------------------------------|-----------------------------|----------------------|-------------------|
| Identification      |        |                      |          | Relay Output                         |                             |                      |                   |
| #                   | Number | Name                 | Location | Station Type                         | Contact Change Station List | Option Relay Control | Output Time Range |
| 0001                | 0001   | Master Stations1     |          | IX-MV7-*                             |                             | Disable              | 200-2000 [msec]   |
| 0002                | 0002   | Master Stations2     |          | IX-MV7-*                             |                             | Disable              | 200-2000 [msec]   |
| 0003                | 0003   | Master Stations3     |          | IX-MV7-*                             |                             | Disable              | 200-2000 [msec]   |
| 0004                | 0004   | Video Stations1      |          | IX-DV, IX-DVF(-)                     |                             | Disable              | 200-2000 [msec]   |
| 0005                | 0005   | Video Stations2      |          | IX-DV, IX-DVF(-)                     |                             | Disable              | 200-2000 [msec]   |
| 0006                | 0006   | Audio Stations1      |          | IX-SSA(-)                            |                             | Disable              | 200-2000 [msec]   |
| 0007                | 0007   | Handset Sub Station1 |          | IX-RS-*                              |                             | Disable              | 200-2000 [msec]   |
| 0008                | 0008   | I/O Adaptor1         |          | IXW-MA                               | Open                        | Disable              | 200-2000 [msec]   |

### Output Time Range

For the interacting station, use the drop-down for **Output Time Range** to choose between milliseconds (*msec*) and seconds (*sec*).

### Output Time

After selecting a range, chose the amount of time for the relay to activate.


### Update

Click **Update** to save the settings.

# Uploading the Setting File


## Setting File Upload

The final step after configuring new settings, or making changes to existing settings, is to upload the setting file to all stations. If the setting files are not uploaded, any changes made in Support Tool will not be reflected on the station(s).

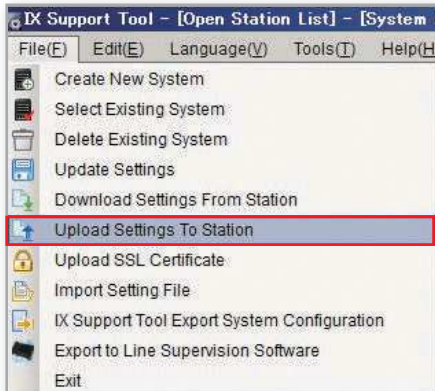

### Upload Settings To Station

From the menu bar, select File then Upload Settings To Station.

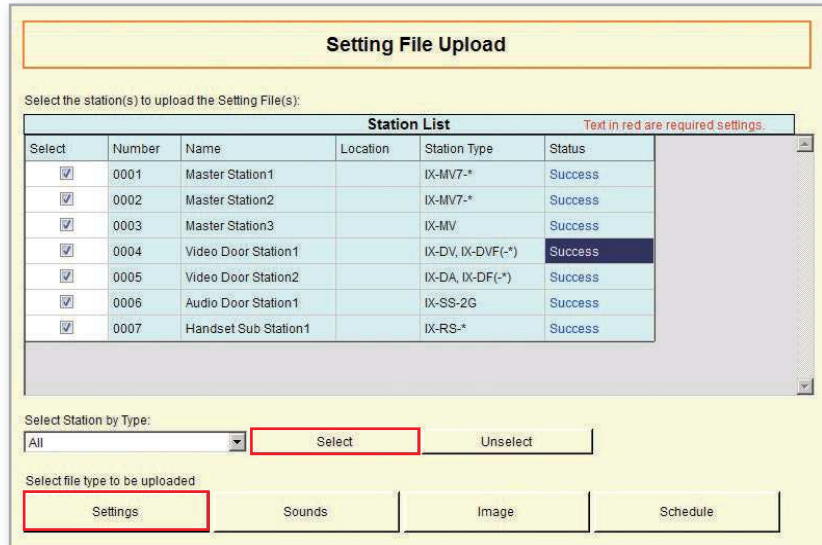

### Select Stations

Click **Select** to check all stations in the system.

### Upload Settings

Click **Settings** to begin the upload process.

### Other Uploads (Optional)

Click the respective button if custom Sounds, Images, or Schedules were configured.

## Upload Status

If the status shows Failed, ensure the programming PC is in the same subnet as the IX Stations it is uploading to (page 3), and that the stations are powered on and available (solid status light on the station).


A status of Changes Required will be accompanied by a popup explaining "**Station vulnerabilities detected**". This is due to missing or insufficient passwords. To review the set ID and Passwords, expand Station Information on the left hand side window and select ID and Password.

The **User**, **ONVIF**, and **RTSP** passwords can be left blank. Update these settings, and upload again.

## Export Settings

A copy of the system's setting file should be exported to a secure location or external drive. This step is critical for the ongoing maintenance this system. If settings are to be changed in the future, or new stations are to be added, this file is required to do so.

To export the file, click on **File(F)** at the top of the screen and select **IX Support Tool Export System Configuration**.

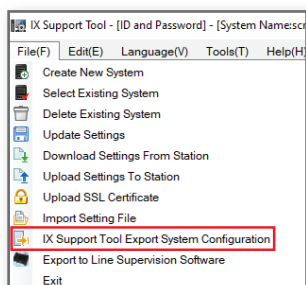

### Export

Click **Export** to select a location to save the system's setting file.

### Select Folder

Select location to save the file then click **OK**.

### Finish

Lastly, once the setting file has been saved, click **Finish**.

# Door Call Destinations and Master Address Book

## Getting Started

Setting stations to only call or communicate to other stations within a system is possible through configuring call lists and Address Books for doors and master stations, respectively. The following steps are explained for systems that have already completed the setup process shown on pages 3-7.


### Master Station Address Book

A master station's Address Book contains the station information of each station in the system by default. A station must be in the Address Book of a master station if it is to call it directly (*manually or by Speed Dial*), activate the door release of that station, transfer that call to another station, and other specific features.

**This is NOT a requirement for setting door station call-in destinations (which doors call which masters), detailed on the next page. If Address Book partitioning is not needed, refer to page 13.**

### Station Types: IX-MV, IX-MV7-\*


Expand System Information on the left-hand menu and select Address Book.

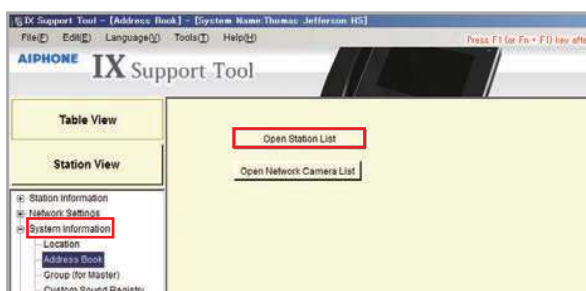

#### Open Station List

Click **Open Station List**

Displayed will be a row of master stations that are part of the system, and columns of stations with check marks indicating that they are in that station's Address Book. By default, all stations will be in each master station's Address Book. To remove a station from an Address Book, the check mark will need to be removed.

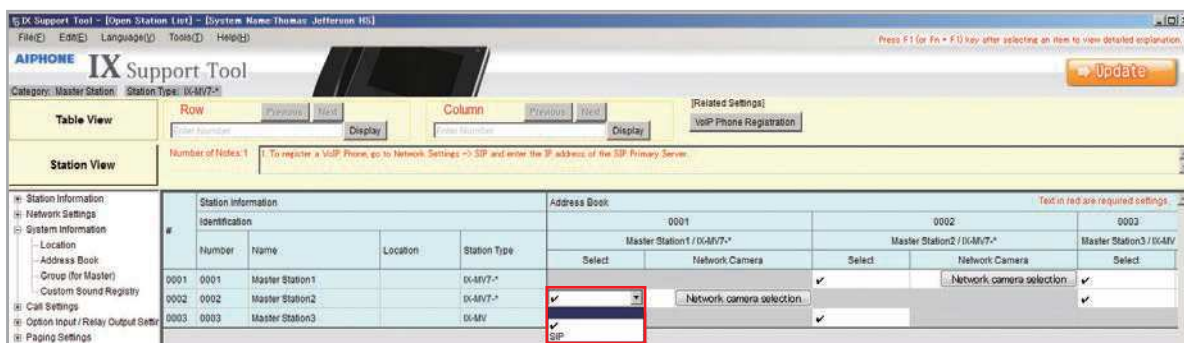

#### Removing Stations from an Address Book

Find the cross section between the master station and the station to be removed from its Address Book. Use the drop-down menu under Select and change the **check mark** to the **Blank** selection.

#### Update

Click the **Update** button save the changes.

# Door Call Destinations

## Door/Sub Station Call Destinations

Expand **Call Settings** on the left-hand menu and select **Called Stations (Door/Sub Stations)**.

Displayed will be a row of door/sub stations that are part of the system, and columns of stations they are able to communicate with. By default, all door/sub stations are set to call every master station. Note the Station Type for the next step.

### Station Types: IX-DV, IX-DVF(\*), IX-SSA(\*), IX-SS-2G, IX-RS-\*

**Table View**

**Station View**

- Station Information
- Network Settings
- System Information
- Call Settings**
  - Station Information
  - Called Stations (Master Station)
  - Called Stations (Door/Sub Stations)**
  - Call Origination
  - Incoming Call

#### Display Settings

Ensure that **Group 01** (default) is selected from the **Display Settings** drop-down menu at the top of the screen.

#### Disabling Call-in Per Station

Find the cross section between the door and master station communication will be enabled/disabled between. By default, there will be a **U** in the drop-down menu. Click this drop-down and select the **Blank** option.

#### Update

Click the **Update** button save the changes.

### Station Types: IX-DA, IX-DF(\*), IX-BA, IX-SS(\*)

Expand **Call Settings** on the left-hand menu and select **Called Stations (Door/Sub Stations)**.

Displayed will be a row of the door/sub stations part of the system and columns of stations they are able to communicate with. By default, all door/sub stations are set to call every master station.

**Table View**

**Station View**

- Station Information
- Network Settings
- System Information
- Call Settings**
  - Station Information
  - Called Stations (Master Station)
  - Called Stations (Door/Sub Stations)**
  - Call Origination
  - Incoming Call

#### Display Settings

From the **Display Settings** drop-down menu at the top of the screen, select **Group 10**.

#### Disabling Call-in Per Station

Find the cross section between the door and master station that communication will be enabled/disabled between. Click this and select the **Blank** option.

#### Update

Click the **Update** button save the changes.

#### Upload:

↑ The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.

# Call Transfer - Absent Transfer

## Getting Started

There are three types of Call Transfers: Absent, Delay, and Schedule. Before configuring transfer settings, refer to page 14 to customize door station call-in destinations and master station Address Books.

**Absent:** Calls are immediately transferred.

**Delay:** Transfer after a set amount of time.

**Schedule:** Transfer after a set time of day on specified days.

## Absent Transfer

Absent Transfer is used situationally, meant to be manually activated by pressing the **Transfer** button on the master station. If Absent Transfer is **Enabled** and activated, an incoming call will be immediately be transferred.

### Step 1: Enabling Absent Transfer

From the menu on the left, expand Transfer Settings and select Absent Transfer.

Table View

Station View

- Station Information
- Network Settings
- System Information
- Call Settings
- Option Input / Relay Output Set
- Paging Settings
- Function Settings
  - Transfer Settings
    - Absent Transfer**
    - Delay Transfer
    - Schedule Transfer
    - Lock Transfer
- Station Settings
- Maintenance

DC Support Tool - Jefferson H02

Press F1 (or F6) key after selecting an item to view detailed explanation

Tool

Update

of Nodes 2: [0-MV] can set Max 10 Transfer Destinations and Max. 1 Re-Transfer Destination.  
[0-MV] can set Max. 1 Transfer Destination.

| Station Information |                 |          |              | Transfer Settings |                           |        |        |        |        |        |        |        |        |        |        |        |
|---------------------|-----------------|----------|--------------|-------------------|---------------------------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| Identification      |                 |          |              | Absent Transfer   |                           |        |        |        |        |        |        |        |        |        |        |        |
| Number              | Name            | Location | Station Type | Absent Transfer   | Transfer Destination List |        |        |        |        |        |        |        |        |        |        |        |
|                     |                 |          |              |                   | Station List              | Number | No. 01 | No. 02 | No. 03 | No. 04 | No. 05 | No. 06 | No. 07 | No. 08 | No. 09 | No. 10 |
| 0001                | Master Station1 |          | U-MV7-*      | Disable           | Open                      |        |        |        |        |        |        |        |        |        |        |        |
| 0002                | Master Station2 |          | U-MV7-*      | Disable           | Open                      |        |        |        |        |        |        |        |        |        |        |        |
| 0003                | Master Station3 |          | U-MV         | Disable           | Open                      |        |        |        |        |        |        |        |        |        |        |        |

Select Stations

Select Number: (04)

Test in red are required settings

| Select                              | Number | Name                 | Location | Station Type   |
|-------------------------------------|--------|----------------------|----------|----------------|
| <input checked="" type="checkbox"/> | 0002   | Master Station2      |          | U-MV7-*        |
| <input type="checkbox"/>            | 0003   | Video Stations1      |          | U-DV (U-DVF-*) |
| <input type="checkbox"/>            | 0004   | Audio Stations1      |          | U-SS-SS        |
| <input type="checkbox"/>            | 0005   | Handset Sub Station1 |          | U-RS-*         |

OK Cancel

**Absent Transfer**

Use the drop-down menu to Enable Absent Transfer on a station.

**Station List**

Click Open and select the station(s) to receive the transfer, and click OK.

**Update**

Click the Update button to save the changes.

### Step 2: Re-Transfer (Optional)

If the Absent Transfer destination is unavailable, **Re-Transfer Destination** allows the call to be sent to another master station with it's own transfer configuration to begin another round of transfers.

DC Support Tool - Jefferson H02

Press F1 (or F6) key after selecting an item to view detailed explanation

Tool

Update

of Nodes 2: [0-MV] can set Max 10 Transfer Destinations and Max. 1 Re-Transfer Destination.  
[0-MV] can set Max. 1 Transfer Destination.

| Station Information |                 |          |              | Transfer Settings |                           |        |        |        |        |        |        |        |        |        |        |        | Re-Transfer Destination |        |
|---------------------|-----------------|----------|--------------|-------------------|---------------------------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|-------------------------|--------|
| Identification      |                 |          |              | Absent Transfer   |                           |        |        |        |        |        |        |        |        |        |        |        |                         |        |
| Number              | Name            | Location | Station Type | Absent Transfer   | Transfer Destination List |        |        |        |        |        |        |        |        |        |        |        | Station List            | Number |
|                     |                 |          |              |                   | Station List              | Number | No. 01 | No. 02 | No. 03 | No. 04 | No. 05 | No. 06 | No. 07 | No. 08 | No. 09 | No. 10 |                         |        |
| 0001                | Master Station1 |          | U-MV7-*      | Enable            | Open                      | 0002   |        |        |        |        |        |        |        |        |        |        |                         |        |
| 0002                | Master Station2 |          | U-MV7-*      | Disable           | Open                      |        |        |        |        |        |        |        |        |        |        |        |                         |        |
| 0003                | Master Station3 |          | U-MV         | Disable           | Open                      |        |        |        |        |        |        |        |        |        |        |        |                         |        |

Station List

Select Number: (1/7)

Test in red are required settings

| Select                              | Number | Name                 | Location | Station Type   |
|-------------------------------------|--------|----------------------|----------|----------------|
| <input checked="" type="checkbox"/> | 0002   | Master Station2      |          | U-MV7-*        |
| <input type="checkbox"/>            | 0003   | Master Station3      |          | U-MV           |
| <input type="checkbox"/>            | 0004   | Video Door Station1  |          | U-DV (U-DVF-*) |
| <input type="checkbox"/>            | 0005   | Video Door Station2  |          | U-DA (U-DF-*)  |
| <input type="checkbox"/>            | 0006   | Audio Door Station1  |          | U-SS-SS        |
| <input type="checkbox"/>            | 0007   | Handset Sub Station1 |          | U-RS-*         |
| <input type="checkbox"/>            | 0009   | VOP Phone            |          | VOP Phone      |

OK Cancel

**Re-Transfer Destination**

Select the Station Number of the stations receiving the transfer, and click OK.

**Update**

Click the Update button to save the changes.

**Note:**

 Re-Transfer does not begin a new **Call Timeout** countdown (*Call Settings > Call Origination*). It may be necessary to extend the call-in time to utilize this setting.

#### Upload:

↑ The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.

# Call Transfer - Delay Transfer

## Delay Transfer

Delay Transfer will automatically transfer an incoming call after a set amount of time.

### Step 1: Enabling Absent Transfer

From the menu on the left, expand **Transfer Settings** and select **Delay Transfer**.

| Station Information | Transfer Settings |          |              |                |                  |              |
|---------------------|-------------------|----------|--------------|----------------|------------------|--------------|
| Identification      | Delay Transfer    |          |              |                |                  |              |
| Number              | Name              | Location | Station Type | Delay Transfer | Delay Time [sec] | Station List |
| 0001                | Master Station1   |          | IX-MV/7-*    | Enable         | 30               | Open         |
| 0002                | Master Station2   |          | IX-MV/7-*    | Disable        | 30               | Open         |
| 0003                | Master Station3   |          | IX-MV        | Disable        | 30               | Open         |

#### Delay Transfer

Use the **Delay Transfer** drop-down menu to select **Enable** or **Disable**.

#### Station List

Click **Open** and select the station(s) to receive the transfer, and click **OK**.

#### Delay Time

Enter the **Delay Time** before the call is transferred.

#### Update

Click the **Update** button to save the changes.

### Step 2: Re-Transfer (Optional)

If the Absent Transfer destination is unavailable, **Re-Transfer Destination** allows the call to be sent to another master station with it's own transfer configuration to begin another round of transfers.

| Station Information | Re-Transfer Destination |                |                  |              |        |
|---------------------|-------------------------|----------------|------------------|--------------|--------|
| Location            | Station Type            | Delay Transfer | Delay Time [sec] | Station List | Number |
|                     | IX-MV/7-*               | Enable         | 30               | Open         |        |
|                     | IX-MV/7-*               | Disable        | 30               | Open         |        |
|                     | IX-MV                   | Disable        | 30               | Open         |        |

#### Re-Transfer Destination

Select the Station Number of the stations receiving the transfer, and click **OK**.

#### Update

Click the **Update** button to save the changes.

#### Note:

Re-Transfer does not begin a new **Call Timeout** countdown (**Call Settings > Call Origination**). It may be necessary to extend the call-in time to utilize this setting.

#### Upload:

The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.


# Call Transfer - Schedule Transfer

## Schedule Transfer

Delay Transfer will automatically transfer an incoming call based on a created schedule that can be set for a specific time of day, and on a daily schedule.

### Step 1: Enabling Absent Transfer

From the menu on the left, expand **Transfer Settings** and select **Schedule Transfer**.

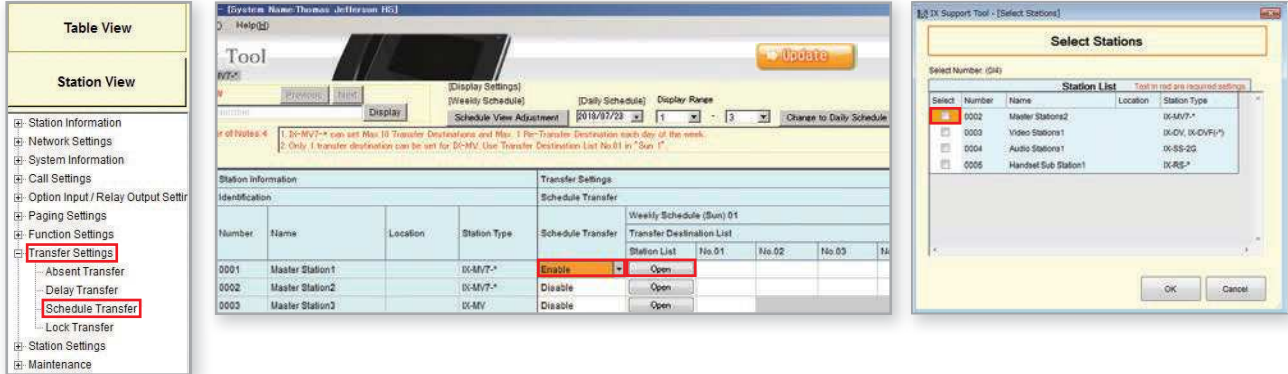

#### Schedule Transfer

Use the drop-down menu to **Enable** Schedule Transfer.

#### Station List


Click **Open** and select the station(s) to receive the transfer, and click **OK**.

#### Update

Click the **Update** button to save the changes.


### Step 2: Schedule View Adjustment

At the top of the Schedule Transfer settings page there are several ways to adjust what is displayed, and how it is displayed, in this section. Click **Schedule View Adjustment** to open these options.

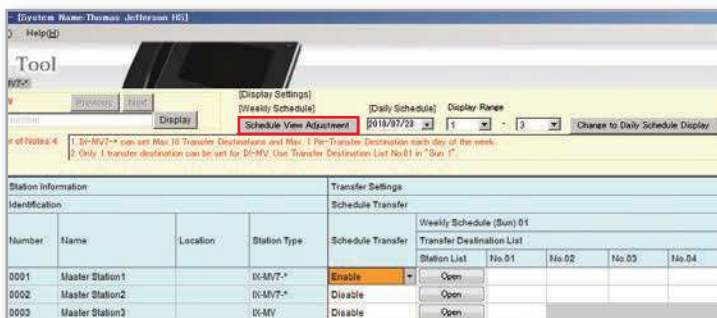

#### Station List

Click **Schedule View Adjustment** to open the settings window.

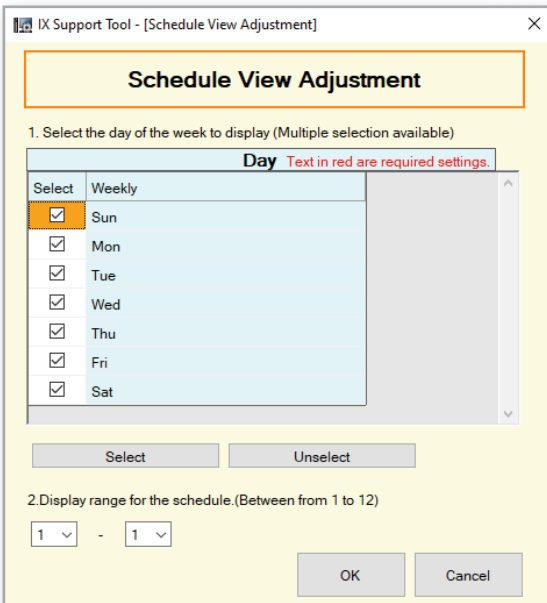

#### Schedule View Adjustment

**Day:** Place a check mark next to every day in which a Schedule Transfer will be used.

**Display Range:** Each day can have up to 12 individual transfer times. Use the drop-down options to choose how many of those 12 to display.

*If every day of each week are to repeat themselves, select 1 in each drop-down.*

Click **OK** to return close the window.

## Call Transfer - Schedule Transfer

### Step 2: Schedule Transfer Start and End Time

Scrolling to the right, the daily schedule will need to be created by settings a **Start and End Time** for each station and each day.

Scroll Right →

Scroll Right →

Press F1 (or Fn + F1) key after selecting an item to view detailed explanation.

**Note:** In this example, calls will be transferred between 8:00am and 5:00pm every Sunday.

Text in red are required settings.

| Weekly Schedule (Sun) 01  |       |                         |        | Weekly Schedule (Sun) 02 |        |          |        |                           |       |       |       |       |
|---------------------------|-------|-------------------------|--------|--------------------------|--------|----------|--------|---------------------------|-------|-------|-------|-------|
| Transfer Destination List |       | Re-Transfer Destination |        | Start Time               |        | End Time |        | Transfer Destination List |       |       |       |       |
| No.09                     | No.10 | Station List            | Number | Hour                     | Minute | Hour     | Minute | Station List              | No.01 | No.02 | No.03 | No.04 |
|                           |       | Open                    |        | 08                       | 00     | 17       | 00     | Open                      |       |       |       |       |
|                           |       | Open                    |        |                          |        |          |        | Open                      |       |       |       |       |

#### Scroll Right

Scroll the window to the right until the **Start Time** and **End Time** Columns are displayed.

#### Start and End Time

Enter a **Start Time** and **End Time** to the specific day of the week or date that the transfer is scheduled for.

#### Update

Click the **Update** button to save the changes.

#### Upload:



The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.

# IP Camera Integration

## Getting Started

The IX Series allows integration of IP cameras that are ONVIF profile S compliant. These cameras can be called up by either audio or audio/video stations, as well as individually monitored by master stations.

### Step 1: Opening Network Camera Registry

Network Cameras will first need to be registered in Support Tool.



#### Address Book

From the menu on the left expand System Information, and select Address Book.

#### Network Camera List

Click **Open Network Camera List**.

#### Network Camera Registry

Click **Open Network Camera Registry**.


### Step 2: Registering a Network Camera

Support Tool will search for available Network Cameras on the network, and any camera found will be listed in the **Network Camera Search List**. If a known camera is not found, place the programming PC on the same network switch as the camera(s), and attempt the search again.



#### Add Camera

Select **Add Camera** and the Support Tool will search the network of all compatible network cameras.

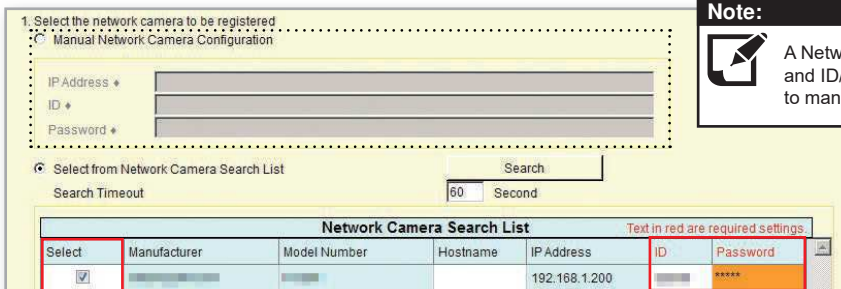


#### Note:

A Network Camera's IP Address and ID/Password may be entered to manually add the device.

#### ID and Password

Check the box of each IP camera to be register. Then, enter the ID and Password required for each selected camera.

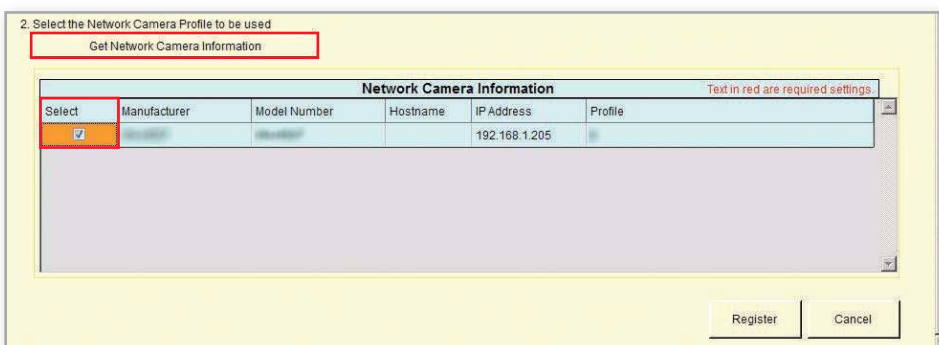

#### IP Camera Information

Click **Get Network Camera Information** to automatically find the IP camera's video profile information.

#### Select a Profile

Check the box of each IP camera video profile to use with the system.

#### Register

Click **Register** to apply the selected settings and register chosen network cameras.

## IP Camera Integration

### Step 3: Registering a Network Camera to a Master Station

For a Master Station to interact with a Network Camera, either during a camera call-up or while monitoring, it must be registered to a Master Station's **Network Camera List**.

| #    | Identification | Number           | Name | Location | Station Type | Select | PTZ Operation | Audio Monitoring |
|------|----------------|------------------|------|----------|--------------|--------|---------------|------------------|
| 0001 | 0001           | Master Stations1 |      |          | IX-MV7-*     | 001    | Enable        | Enable           |
| 0002 | 0002           | Master Stations2 |      |          | IX-MV7-*     |        | Enable        | Enable           |
| 0003 | 0003           | Master Stations3 |      |          | IX-MV        |        |               |                  |

#### Selecting the IP Camera

Use the **Select** drop-down menu to select each Master Station you wish to register the IP camera to.

#### Update

Click **Update** to save the changes.

### Step 4: Assigning a Network Camera to a Station

To assign a IP camera to a station for station call-up, the camera will need to be registered to each station it will interact with.

| #    | Identification | Number           | Name | Location | Station Type | Select | PTZ Operation | Audio Monitoring |
|------|----------------|------------------|------|----------|--------------|--------|---------------|------------------|
| 0001 | 0001           | Master Stations1 |      |          | IX-MV7-*     | 001    | Enable        | Enable           |
| 0002 | 0002           | Master Stations2 |      |          | IX-MV7-*     |        | Enable        | Enable           |
| 0003 | 0003           | Master Stations3 |      |          | IX-MV        |        |               |                  |

#### Address Book

From the menu on the left expand **System Information** and select **Address book**.

#### Open Station List

Click **Open Station List** to open the **Station List** screen.

| #    | Identification | Number           | Name | Location | Station Type | Select | PTZ Operation | Audio Monitoring |
|------|----------------|------------------|------|----------|--------------|--------|---------------|------------------|
| 0001 | 0001           | Master Stations1 |      |          | IX-MV7-*     | 001    | Enable        | Enable           |
| 0002 | 0002           | Master Stations2 |      |          | IX-MV7-*     |        | Enable        | Enable           |
| 0003 | 0003           | Master Stations3 |      |          | IX-MV        |        |               |                  |

| #    | Identification | Number           | Name | Location | Station Type | Select | PTZ Operation | Audio Monitoring |
|------|----------------|------------------|------|----------|--------------|--------|---------------|------------------|
| 0001 | 0001           | Master Stations1 |      |          | IX-MV7-*     | 001    | Enable        | Enable           |
| 0002 | 0002           | Master Stations2 |      |          | IX-MV7-*     |        | Enable        | Enable           |
| 0003 | 0003           | Master Stations3 |      |          | IX-MV        |        |               |                  |

#### Network Camera Selection

Click **Network camera selection** to open a new window to select a registered IP camera.

#### Update

Click **Update** to save the changes.

#### Upload:



The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.

# Timer Settings

## Getting Started

The call-in, communication, and door release timers are found across several sections within Support Tool. The following steps will quickly show their location, and give a simple example of adjusting the respective setting.

## Door Release Output Timer

To adjust the amount of time the door release relay output activates, expand **Relay Input / Relay Output Settings** and click **Relay Output**.

Scroll Right →
Scroll Right →

**Table View**

**Station View**

- Station Information
- Network Settings
- System Information
- Call Settings
- Option Input / Relay Output Settings**
  - Option Input
  - Relay Output**
- Paging Settings

| Station Information |                |                      |          |                   | Option Input / Relay Output Settings |                                                                      |             |
|---------------------|----------------|----------------------|----------|-------------------|--------------------------------------|----------------------------------------------------------------------|-------------|
| #                   | Identification |                      |          |                   | Relay Output                         |                                                                      |             |
|                     | Number         | Name                 | Location | Station Type      | Relay Output 1                       | Relay Output 1 (Output Time is valid when Relay Output function is s |             |
|                     |                |                      |          |                   | Option Relay Control                 | Output Time Range                                                    | Output Time |
| 0001                | 0001           | Master Stations1     |          | IX-MV7-*          | Disable                              | 200-2000 [msec]                                                      | 400         |
| 0002                | 0002           | Master Stations2     |          | IX-MV7-*          | Disable                              | 200-2000 [msec]                                                      | 400         |
| 0003                | 0003           | Master Stations3     |          | IX-MV7-*          | Disable                              | 200-2000 [msec]                                                      | 400         |
| 0004                | 0004           | Video Stations1      |          | IX-DV, IX-DVF(-*) | Disable                              | 200-2000 [msec]                                                      | 400         |
| 0005                | 0005           | Video Stations2      |          | IX-DV, IX-DVF(-*) | Disable                              | 200-2000 [msec]                                                      | 400         |
| 0006                | 0006           | Audio Stations1      |          | IX-SSA(-*)        | Disable                              | 3-600 [sec]                                                          | 400         |
| 0007                | 0007           | Handset Sub Station1 |          | IX-RS-*           | Disable                              | 200-2000 [msec]                                                      | 400         |
| 0008                | 0008           | I/O Adaptor1         |          | IXW-MA            | Disable                              | 200-2000 [msec]                                                      | 400         |

**Output Time Range and Output Time**

Use the drop-down menu under Output Time Range to select either **200-2000(msec)** or **3-600(sec)**, then use the **Output Time** section to enter the desired value.

**Update**

Click the **Update** button save the changes.

### Upload:

↑ The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 11 for more details on this process.

## Call Timeout

To adjust the time a station will call-in to another station before ending, expand **Call Settings** and click **Call Origination**.

**Table View**

**Station View**

- Station Information
- Network Settings
- System Information
- Call Settings**
  - Station Information
  - Called Stations (Master Station)
  - Called Stations (Door/Sub Station)
  - Call Origination**
  - Incoming Call
- Option Input / Relay Output Settings

| Station Information |                |                      |          |                   | Call Settings        |                |              |            |
|---------------------|----------------|----------------------|----------|-------------------|----------------------|----------------|--------------|------------|
| #                   | Identification |                      |          |                   | Call Origination     |                |              |            |
|                     | Number         | Name                 | Location | Station Type      | Call Button          |                | Call Timeout |            |
|                     |                |                      |          |                   | Call Method          | Ringback Tone  | Select       | 10-600 sec |
| 0001                | 0001           | Master Stations1     |          | IX-MV7-*          |                      | Call Pattern 4 | 10-600 sec   | 60         |
| 0002                | 0002           | Master Stations2     |          | IX-MV7-*          |                      | Call Pattern 4 | 10-600 sec   | 60         |
| 0003                | 0003           | Master Stations3     |          | IX-MV7-*          |                      | Call Pattern 4 | 10-600 sec   | 60         |
| 0004                | 0004           | Video Stations1      |          | IX-DV, IX-DVF(-*) | Standard Destination | Call Pattern 1 | 10-600 sec   | 60         |
| 0005                | 0005           | Video Stations2      |          | IX-DV, IX-DVF(-*) | Standard Destination | Call Pattern 1 | 10-600 sec   | 60         |
| 0006                | 0006           | Audio Stations1      |          | IX-SSA(-*)        | Standard Destination | Call Pattern 1 | 10-600 sec   | 60         |
| 0007                | 0007           | Handset Sub Station1 |          | IX-RS-*           | Standard Destination | Call Pattern 1 | 10-600 sec   | 60         |

**Call Timeout**

Under Call Timeout, select the desired duration between 10 and 600 seconds.

**Update**

Click the **Update** button save the changes.

### Upload:

↑ The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.

# Timer Settings

## Talk Timeout

To adjust the amount of time a station will communication to another station before ending the call, expand **Station Settings** and click **Communication**.

**Table View**

**Station View**

- ⊕ Station Information
- ⊕ Network Settings
- ⊕ System Information
- ⊕ Call Settings
- ⊕ Option Input / Relay Output Settings
- ⊕ Paging Settings
- ⊕ Function Settings
- ⊕ Transfer Settings
- ⊕ **Station Settings**
  - Speed Dials / Favorites
  - Privacy
  - Volume / Tone
  - Communication**
  - Monitor
  - Master Station Display
  - Camera
  - Door Release Assignment
  - Line Supervision
- ⊕ Maintenance

| Station Information |                |                      |          |                   | Station Settings   |            |                          |
|---------------------|----------------|----------------------|----------|-------------------|--------------------|------------|--------------------------|
| #                   | Identification |                      |          |                   | Communication      |            |                          |
|                     | Number         | Name                 | Location | Station Type      | Talk Timeout [sec] |            | Communication Start Tone |
|                     |                |                      |          |                   | Select             | 30-600 sec |                          |
| 0001                | 0001           | Master Stations1     |          | IX-MV7-*          | 30-600 sec         | 60         |                          |
| 0002                | 0002           | Master Stations2     |          | IX-MV7-*          | 30-600 sec         | 60         |                          |
| 0003                | 0003           | Master Stations3     |          | IX-MV7-*          | 30-600 sec         | 60         |                          |
| 0004                | 0004           | Video Stations1      |          | IX-DV, IX-DVF(-*) | 30-600 sec         | 60         | None                     |
| 0005                | 0005           | Video Stations2      |          | IX-DV, IX-DVF(-*) | Infinite           | 60         | None                     |
| 0006                | 0006           | Audio Stations1      |          | IX-SSA(-*)        | 30-600 sec         | 60         | None                     |
| 0007                | 0007           | Handset Sub Station1 |          | IX-RS-*           | 30-600 sec         | 60         | None                     |

**Talk Timeout**

Use the drop-down menu under Talk Timeout to select either **Infinite** or **30-600 sec**, then use the 30-600 sec section to enter the desired value.

**Update**

Click the **Update** button save the changes.

### Upload:



The setting file needs to be uploaded to each station for these settings to take effect. Refer to page 12 for more details on this process.





<https://www.aiphone.net/>

AIPHONE CO., LTD., NAGOYA, JAPAN

Issue Date: Apr.2020 FK2465 © 0420 MQ 62236