




Medium Base Lampholders

Aluminum—Push-In Terminals / Strain Relief Hooks

3 Way Turn Knob Socket w/Removable Knob


| Cat No. | Finish | Terminal | Cap | Set Screw | Uno-Thread | Master |
|---------|------------|----------|---------|-----------|------------|--------|
| 80-1560 | Brite Gilt | Push-In | 1/8 IPS | Less | No | 250 |
| 80-1561 | Nickel | Push-In | 1/8 IPS | Less | No | 250 |

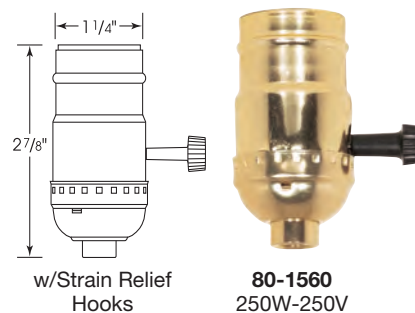

“Push-In” Strain Relief Lampholder Wiring Instructions

1. Strip SPT-2 #18AWG wire 0.75" & tin the ends 0.413" in length.
2. The socket terminals are marked with minus (-) & plus (+). Push the tinned end by hand into the correct terminal.
 - a) Neutral - (ribbed wire) into the minus (-).
 - b) Positive - (smooth wire) into the plus (+).
3. Loop wires under the strain relief hooks.
4. If you make a mistake - insert a wire removing pin into the terminal and push down to release the wire.

A

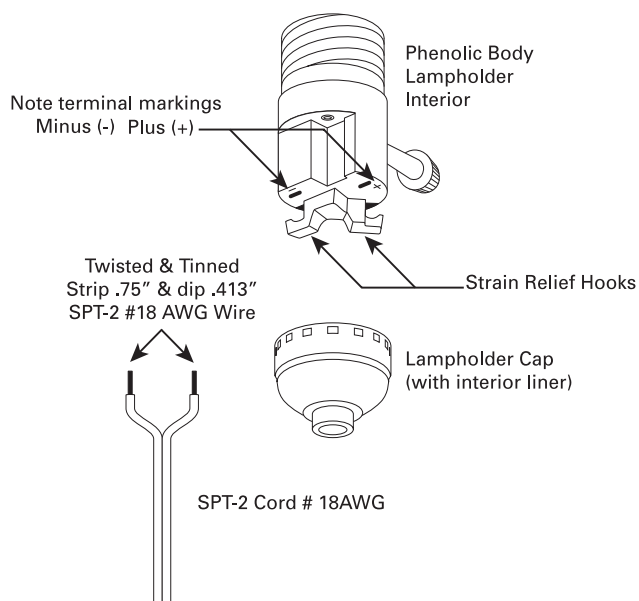

B

