



GEBERIT DUOFIX CARRIERS

Installing Geberit carriers is easy.


They require a 2"×6" wood frame or metal frame construction. The studs must be placed 19¾" apart (clearance) where the carrier will be positioned inside a wall. Frame to wall anchors are available for pre-wall installations.

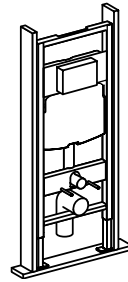

2"×6" in-wall installation

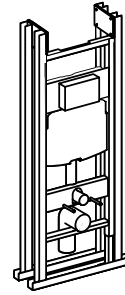

Metal frame in-wall installation

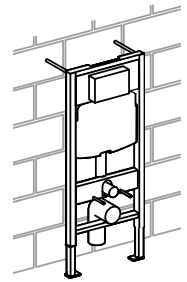

Pre-wall installation


TOILET

111.335.00.5 1.6/0.8 GPF (6/3 LPF)

111.902.00.5 1.28/0.8 GPF (4.8/3 LPF)



With Sigma concealed tank

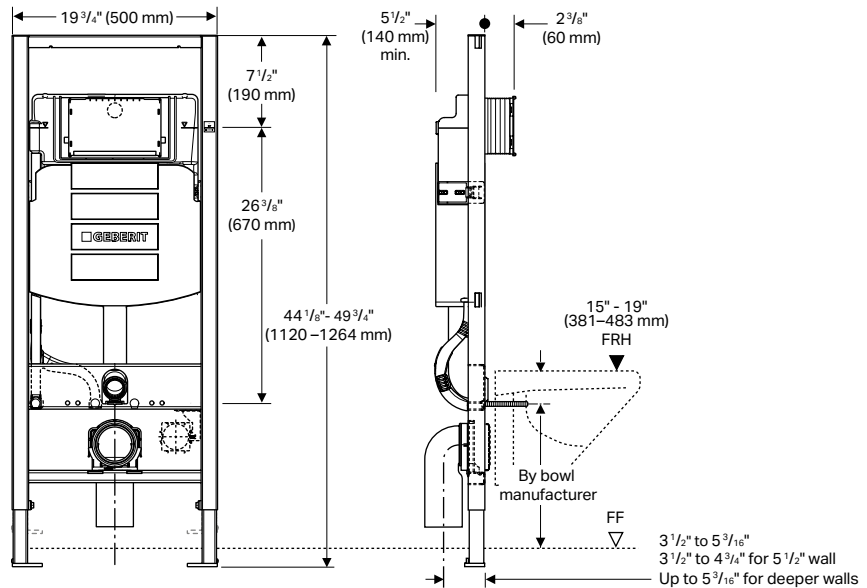

URINAL

111.625.00.1

