

WOOD ROD HANGER INSTALLATION INSTRUCTIONS



1.



Use the Universal Installation Tool (socket driver) and mount it into the chuck of a drill. Insert the rod coupler into the socket driver, and install perpendicular to the base material surface.

NOTE: The Universal Installation Tool should always be used since it spins free on the coupler, preventing stripping of the shank threads and overdriving.


2.



Drive the hanger with smooth steady motion until the coupling is firmly seated against the surface of the base material.

*For some wood applications a 1/8" diameter pre-drilled hole may be required.

3.

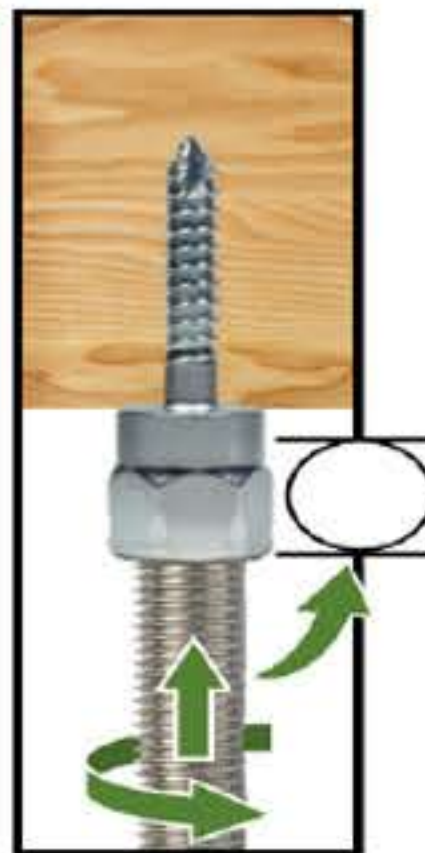

Thread the appropriate diameter steel thread rod or threaded bolt into the rod hanger coupling. The threaded rod or bolt should fully engage the thread length of the coupling on a vertical mount fastener but at least one bolt/rod diameter. The threaded rod or threaded portion of the bolt can pass through coupling of a side mount fastener.



CAUTION!
ALWAYS WEAR EYE PROTECTION

**USE INSTALLATION
TOOLS:**
UNIB



VIEW ON LHDOTTIE.COM!