

Type 1 Door-in-Door (Hinged) Trim Fronts

Features

- Meets door-in-door specifications
- Provides continuous piano hinge
- Permits one-person maintenance


Table 4.14: Hinged Trim

I-Line Fronts	NQ and NF Fronts
Catalog No. [2]	Catalog No. [2]/[3]
HC2652T()HR	NC26()HR
HC2665T()HR	NC32()HR
HC2674T()HR	NC38()HR
HC2683T()HR	NC44()HR
HC2692T()HR	NC50()HR
HC3248T()HR	NC56()HR
HC3264T()HR	NC62()HR
HC3273T()HR	NC68()HR
HC3291T()HR	NC74()HR
HC4250T()HR	NC80()HR
HC4259T()HR	NC86()HR
HC4268T()HR	NC50V()HR
HC4286T()HR	NC56V()HR
HC4486T()HR	NC62V()HR
—	NC68V()HR
—	NC74V()HR
—	NC80V()HR
—	NC86V()HR

Trim Clamps and Screws

Table 4.15: Trim Clamps and Screws

Application	Catalog No.
NQOD Panelboards: Series E1 [1] 400 A and 600 A fronts NEHB Panelboards: Series E1 [1] 600 A fronts I-Line Panelboards: All Series E1 [1] fronts	LP9501
NQOD Panelboards: All Series E1 [1] vented fronts and hinged fronts manufactured after July 1994. NF Panelboards: All vented fronts and hinged fronts. NEHB Panelboards: All Series E1 [1] hinged fronts manufactured after July 1994. I-Line and QMB Panelboards: I-Line front with door manufactured after July 1994 but before August 1997; and I-Line hinged fronts and QMB front with door manufactured after July 1994.	LP9502 (includes 8 trim screws and captive hardware)
NQ and NQOD Panelboards: Screws for all fronts through 225 A. NF Panelboards: Screws for all fronts through 250 A. I-Line Panelboards: 4-piece trim and trim with door manufactured after July 1997. QMB Panelboards: Screws for 4-piece covers.	4020513001K (package of 10)
I-Line Panelboards: Panelboard deadfront screws for 4-piece trim manufactured after July 1994 but before August 1997.	8002506701

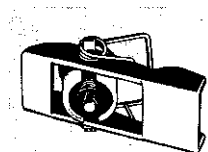

Catalog No.
LP9501

[2] Add "S" for surface or "F" for flush in place of the parentheses.
[3] For welded metal directory, add "WMD" suffix to the end of the catalog number.
[1] Panelboards that meet 1984 NEC® Wire Bending Space are Series E1.