

WEDGE ANCHORS • HEAVY DUTY • CONCRETE & STONE • ZINC




		Gravity Feed Jar			
Size	Min Embed	Part #	Made in U.S.A.	Jar Qty	Master Carton
1/4 x 1 3/4	1 1/8	62028J	—	100	600
1/4 x 2 1/4	1 1/8	62036J	62036US*	100	600
1/4 x 3 1/4	1 1/8	62052J	62052US*	100	600
3/8 x 2 1/4	1 1/2	62236J	62236US*	50	300
3/8 x 2 3/4	1 1/2	62244J	62244US*	50	300
3/8 x 3	1 1/2	62248J	62248US*	50	300
3/8 x 3 3/4	1 1/2	62260J	62260US*	50	300
3/8 x 5	1 1/2	62280J	62280US*	150	150
3/8 x 7	1 1/2	62298*	62298US*	50	50
1/2 x 2 3/4	2 1/4	62444J	62444US*	25	150
1/2 x 3 3/4	2 1/4	62460J	62460US*	25	150
1/2 x 4 1/4	2 1/4	62468J	62468US*	25	150
1/2 x 5 1/2	2 1/4	62488J	62488US*	25	150
1/2 x 7	2 1/4	62498*	62498US*	25	25
5/8 x 3 1/2	2 3/4	62656J	62656US*	10	60
5/8 x 4 1/4	2 3/4	62672J	62672US*	10	60
5/8 x 5	2 3/4	62680*	62680US*	10	100
5/8 x 6	2 3/4	62696*	62696US*	10	10
5/8 x 8	2 3/4	—	62698US*	10	10
5/8 x 8 1/2	2 3/4	62700*	62700US*	10	10
3/4 x 4 3/4	3 1/4	62876*	62876US*	10	100
3/4 x 5 1/2	3 1/4	62888*	62888US*	10	100
3/4 x 6 1/4	3 1/4	62897*	62897US*	10	100
3/4 x 7	3 1/4	62898*	62898US*	10	10
3/4 x 8 1/2	3 1/4	62900*	62900US*	10	10
3/4 x 10	3 1/4	62910*	62910US*	10	10

*These items are packaged in cardboard boxes.

See page 241 for Stainless Steel.

Installation

- 1) Select a carbide drill bit with a diameter equal to the anchor diameter. Drill hole to any depth exceeding the desired embedment.
- 2) Clean hole or continue drilling additional depth to accommodate drill fines.
- 3) Assemble washer and nut, leaving nut flush with end of anchor to protect threads. Drive anchor through material to be fastened until washer is flush to surface of material.
- 4) Expand anchor by tightening nut 3–5 turns past the hand tight position.

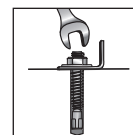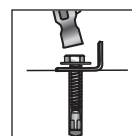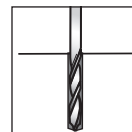

		10 Packs	
Size	Min Embed	Part #	Box Qty
1/4 x 2 1/4	1/8	62037	10
1/4 x 3 1/4	1/8	62053	10
3/8 x 2 1/4	1 1/2	62237	10
3/8 x 2 3/4	1 1/2	62245	10
3/8 x 3	1 1/2	62249	10

For U.S. availability, please contact customer service.

Wedge Anchors are also called:

- Molly Bolts
- Red Heads
- Parabolts
- Kwikbolts
- Thunder Studs
- Stud Bolts