

INSTRUCTIONS

FXLED® 200W 300W 500W INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

WARNING: RISK OF SERIOUS INJURY OR DEATH!

DO NOT MOUNT THE SLIPFITTER TO A TENON OR BRACKET THAT IS MORE THAN 20 DEGREES FROM VERTICAL. MOUNTING AT ANY ANGLE OTHER THAN 0-20 DEGREES INCREASES THE RISK OF DISENGAGEMENT AND/OR FAILURE OF THE SLIPFITTER. INSTALL THE POLE ON A SECURE BASE OR INSTALL THE BRACKET TO A WALL FIRST. THEN PLACE LUMINAIRE ONTO THE POLE OR BRACKET. DO NOT LIFT ASSEMBLED LUMINAIRE OR POLE OR LUMINAIRE & BRACKET. LUMINAIRE OR POLE/BRACKET MAY DISENGAGE.

SLIPFITTER MOUNTING

1. The **Slipfitter** mounting fits a 2 3/8" O.D. **Tenon**. Place the **Slipfitter** over the **Tenon** and secure the fixture with the **Set Screws (4)** on the side of the **Slipfitter**.
2. To adjust the angle of the **Slipfitter**, remove two screws and plug on side of **Cover Plate**. Remove the **Cover Plate**. Loosen the **Locking Bolt** and adjust the angle of the fixture as desired.
3. Feed supply wires from **Tenon** to **Slipfitter** and make necessary connections in the **Slipfitter** and knot wires for strain relief
4. Tighten the **Locking Bolt** and re-attach **Cover Plate**. Seal plug on side of **Cover plate** with Teflon Tape or silicone sealant.

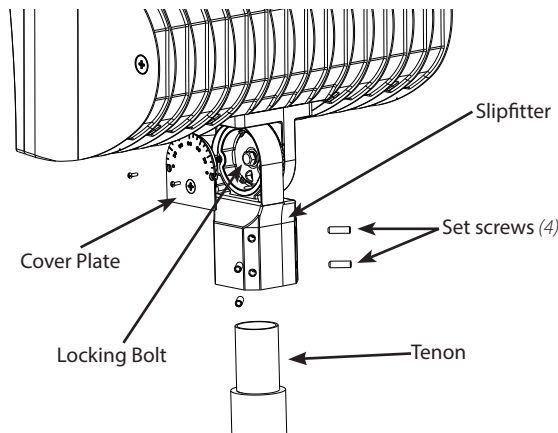


TRUNNION MOUNTING

CAUTION: UL and C-UL listed or CSA certified liquid tight cord grip suitable for use with STW flexible cord shall be used for connection to a wet location outlet box provided by others.

To adjust the angle of the fixture using the trunnion:

1. Loosen the **Pivot Bolts** & angle locking screw.
2. Adjust fixture to desired angle.
3. Tighten **Pivot Bolts** & angle locking screw.

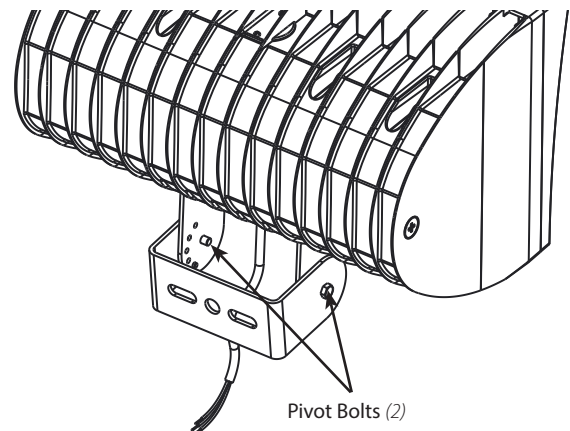

INSTRUCTIONS


FXLED® 200W 300W 500W INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


GUARD OR SHIELD STALLATION

Wire Guard and **Poly Shield** mount with (4) #10-24 **Stainless Steel Screws**. Screws are provided with the accessory. Line up guard or shield with existing pre-drilled holes in frame as shown, tighten screws.

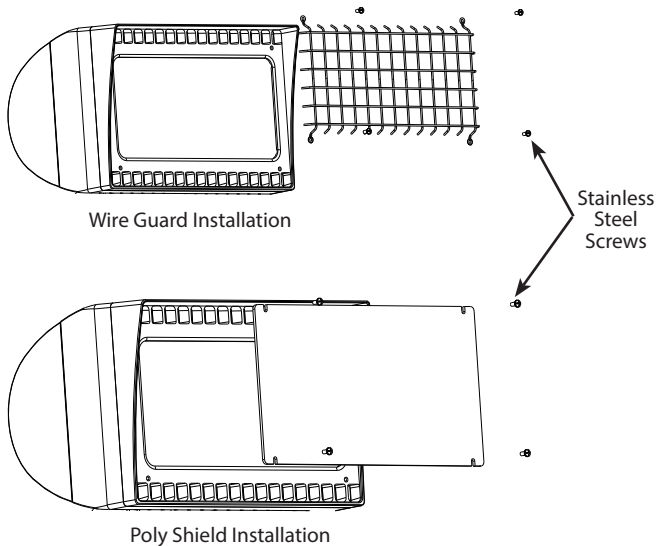

GUARD & SHIELD STALLATION

The **Wire Guard** and **Poly Shield** can be mounted on the same fixture with (4) #10-24 **Stainless Steel Screws** as shown below.

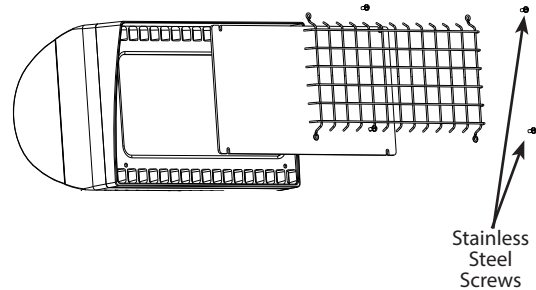


0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For fixtures with Trunnion mounting, a 5-wire cord will be provided. Units ordered with (/480V) suffix are 480V, 50Hz or 60Hz. Units ordered with (/PCS) suffix are with 120V swivel photocell, (/PCS2) suffix are with 277V swivel photocell and (/PCS4) suffix are with 480V swivel photocell. Units ordered with (/PCT) suffix are with 120-277V twistlock photocell and (/PCT4) suffix are with 480V twistlock photocell. For 0-10V Dimming, follow the wiring directions below.

1. Connect the black fixture lead to the **LINE** supply lead.
2. Connect the white fixture lead to the **COMMON** supply lead.
3. Connect the **GROUND** wire from fixture to supply **GROUND**.
4. Connect the purple fixture lead to the (V+) DIM lead.
5. Connect the pink (or gray) fixture lead to the (V-) DIM lead.
6. Cap the yellow fixture lead, if present. Do NOT connect.

NOTE: Do not connect DIM V+ (purple)/ DIM V- (pink/gray) to line voltage or supply ground.

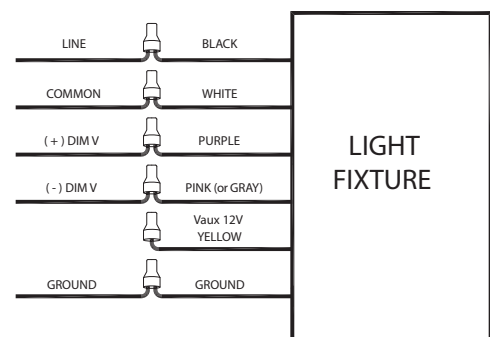


ON/OFF WIRING

(applies for FXLED 200W 300W)

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. Units ordered with (/480V) suffix are 480V, 50Hz or 60Hz. Units ordered with (/PCS) suffix are with 120V swivel photocell, (/PCS2) suffix are with 277V swivel photocell and (/PCS4) suffix are with 480V swivel photocell. Units ordered with (/PCT) suffix are with 120-277V twistlock photocell and (/PCT4) suffix are with 480V twistlock photocell. For Non-Dimming, follow the wiring directions below.

1. Connect the black fixture lead to the **LINE** supply lead.
2. Connect the white fixture lead to the **COMMON** supply lead.
3. Connect the **GROUND** wire from fixture to supply **GROUND**.

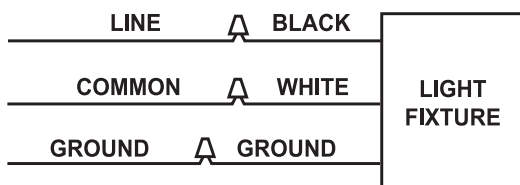

INSTRUCTIONS

FXLED® 200W 300W 500W INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

SURGE PROTECTOR OPTION

Units ordered with (/SP) suffix are provided with 10kV surge protector secured within the fixture. Follow wiring directions as below.

1. Connect the black fixture lead to the **LINE** supply lead and black surge protector wire.
2. Connect the white fixture lead to the **COMMON** supply lead and white surge protector wire.
3. Connect the **GROUND** wire from fixture to supply **GROUND** and green surge protector wire.
4. In units ordered with (/D10) suffix, connect the purple fixture lead to the (V+) DIM lead.
5. In units ordered with (/D10) suffix, connect the pink (or gray) fixture lead to the (V-) DIM lead.

NOTE: Do not connect DIM V+ (purple)/ DIM V- (pink/gray) to line voltage or supply ground.

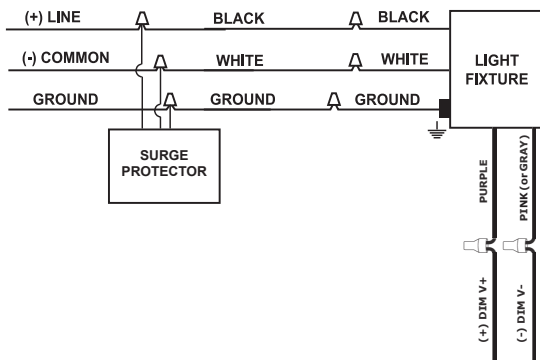

BI-LEVEL DIMMER OPTION

For 100% light output (*disabling the dimmer*), splice red wire with black line wire.

For chosen output only, leave red wire capped.

For Bi-level Function, connect red wire to switched device.

1. Determine what % light output is desired and set switch prior to installation.
Options are: 25%, 50%, and 75%.
2. Connect purple wire with driver's purple wire.
3. Connect pink (or gray) wire with driver's pink (or gray) wire.
4. Connect black wire with driver and supply line wires.
5. Connect white wire with driver and supply neutral wires.

ACCESSORIES

Chrome Wire Guard:	GDFXLED300W
Poly Shield:	GDFXLED300P
Lens & Door Replacement:	LFFXLED300A (<i>Bronze</i>)
	LFFXLED300W (<i>White</i>)

TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Be sure the fixture is grounded properly.
3. Ensure the photocell, if used, is functioning properly.

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry.
2. Do not open fixture to clean the LED. Do not touch the LED.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.



© 2021 RAB LIGHTING Inc.
FXLED 200 300 500 IN 1121
73538-RAB

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request