


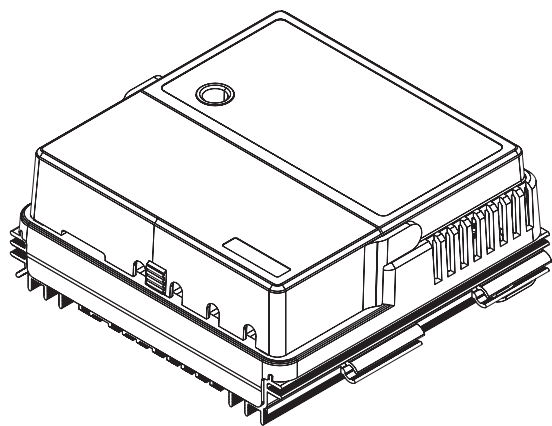

LMRC-221^{v2}

Digital Lighting Management 1 Load Universal Dimming Room Controller

SPECIFICATIONS

Input Voltage	120/277VAC, 50/60Hz
Minimum Load Rating.....	10 watt
Maximum Load Ratings	
Incandescent, Quartz Halogen, LED Drivers*	
Magnetic Low Voltage* Transformer (MLV)	20A
Electronic Low Voltage* Transformer (ELV).....	20A
Electronic Fluorescent Dimming Ballasts:	
2 Wire Advance® Mark X or equal	
3 Wire Lutron® Hi-Lume or Eco-10	
Neon/Cold Cathode (cc)	1920 W @ 120 V
.....	4432 W @ 277 V

* Forward Phase compatible, dimming rated only


Output to DLM Local Network	up to 250mA @ 24VDC
DLM Local Network Characteristics when using LMRC-221:	
Provides low voltage power over Cat 5e cable (LMRJ); max current 800mA.	
Free topology up to 1,000' max.	
Environment:	
Operating Temperature	32° to 131°F (0° to 55°C)
Storage Temperature	23° to 176°F (-5° to 80°C)
Relative Humidity	5 to 95% (non condensing)
Max Branch Circuit Overcurrent Protection	25A

For full operational details see the DLM Dimming System Installation Guide and Dimming System Addendum provided with the room controller and also available at www.wattstopper.com

INSTALLATION SHALL BE IN ACCORDANCE WITH ALL APPLICABLE REGULATIONS, LOCAL AND NEC CODES.

Wire connections shall be rated suitable for the wire size (lead and building wiring) employed.

PLACEMENT EXAMPLE

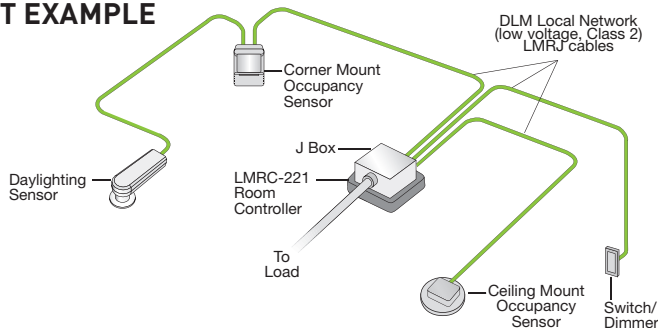


WARNING: TURN THE POWER OFF AT THE CIRCUIT BREAKER BEFORE WIRING.

CAUTION: TO CONNECT A COMPUTER TO THE DLM LOCAL NETWORK USE THE LMCI-100. NEVER CONNECT THE DLM LOCAL NETWORK TO AN ETHERNET PORT - IT MAY DAMAGE COMPUTERS AND OTHER CONNECTED EQUIPMENT.


MOUNTING THE CONTROLLER

The room controller mounts to a four square deep junction box using the included mounting plate with the hinge pins extending away from the box as shown.

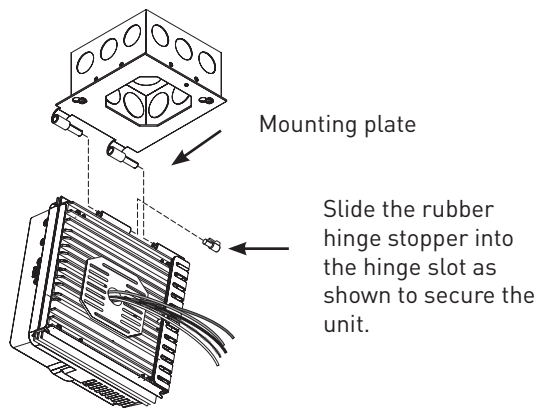

LINE VOLTAGE WIRING

Terminate wiring according to wiring diagram.

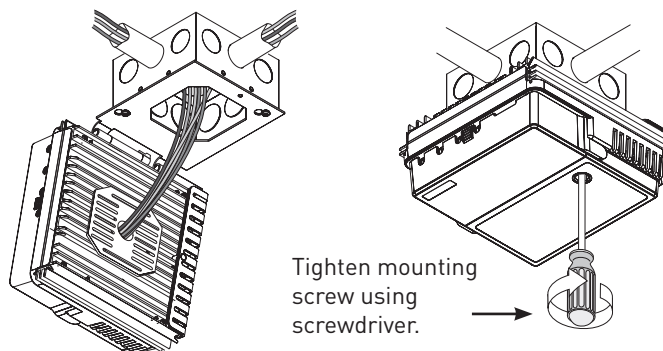


WARNING: TO REDUCE RISK OF ELECTRIC SHOCK. UNIT SHALL BE PROPERLY GROUNDING IN ACCORDANCE WITH NEC AND LOCAL CODES.

CONNECTIVITY

LMRJ connections shown are for example only. LMRJ cables can connect to any DLM device with an open RJ45 receptacle. All line voltage wiring is #12 AWG. Do not connect different load types to the same load output.

WIRING DIAGRAMS


Incandescent, MLV, ELV, LED, Neon/cc, 2 Wire Fluorescent (Advance Mark X or equal)

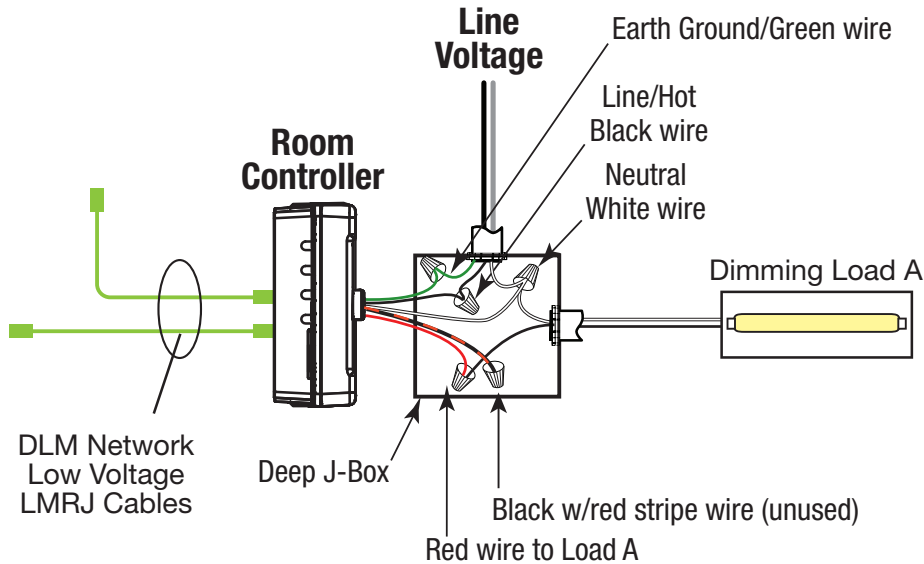

Note: Do not connect different load types to the same load output.


CAUTION: CAP OFF ANY UNUSED WIRES.

3 Wire LED Driver (Lutron or equal)

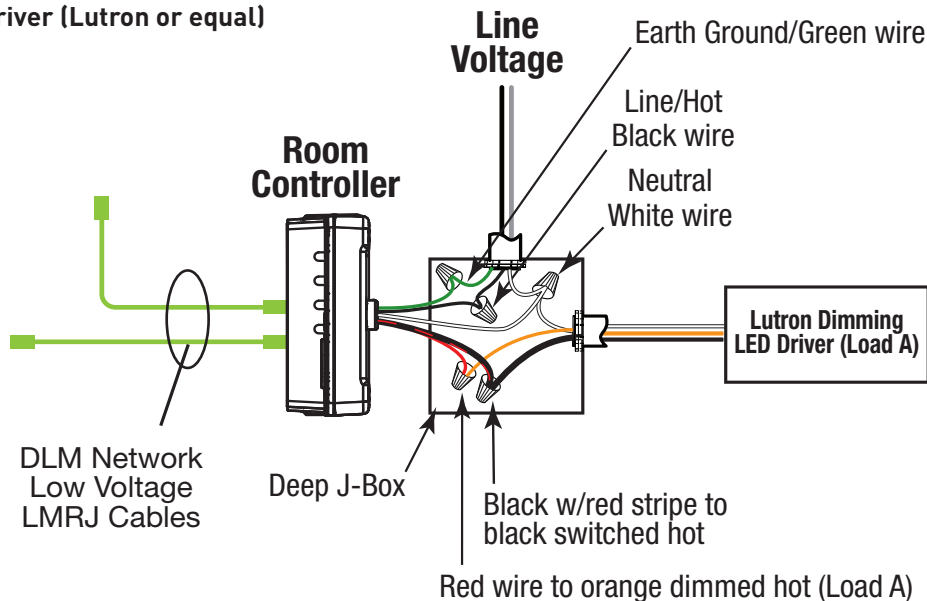

ATTACHING LMRJ LOW VOLTAGE CABLES

To access the RJ45 receptacles, lift the "clamshell" cover on the controller. Remove the rubber jack covers to use the RJ45 receptacles. Plug the cables into the receptacles then secure them under the strain relief hooks. Leave covers in place for all unused receptacles.

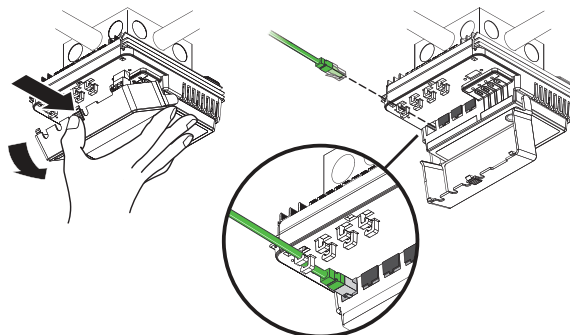

DIMMING CURVE SELECTION

Dimming Curve Selection Procedure

The Dimming Curve button allows selection of the appropriate curve for the connected load type.

By default the curve is factory set to curve 1 which is for incandescent, MLV, ELV, LED (non Lutron), and neon/cc loads.

Step 1 Load Selection


Press and hold the Load button for the load that you wish to configure. The lights will dim down/up in a continuous cycle.

Step 2 Curve Selection

While continuing to **press and hold the Load Button, Tap and release the Dimming Curve Button** to select the correct curve for the connected load type (see Curve/load types).

Each subsequent tap of the dimming curve button will cycle to the next curve. This will be indicated by the frequency at which the yellow Dim Curve LED is blinking (see Curve/load types).

Button Selection Location and LEDs

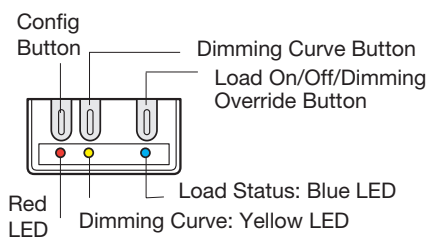

IMPORTANT NOTE: THE DIMMING CURVE MUST BE SET FOR PROPER OPERATION.

The Dimming Curve LED will blink according to load type below.

CURVE/LOAD TYPES	
Dimming Curve	Load Type
Curve 1 - 1 blink followed by a pause, then repeats.	{Incand/MLV/ELV/Neon/cold cathode}
Curve 2 - 2 blinks followed by a pause, then repeats.	{2 wire fluor; Advance Mark X or equal}
Curve 3 - 3 blinks followed by a pause, then repeats.	3 wire Lutron (LED driver)

Step 3 Exit Dimming Curve Selection

To exit Dimming Curve Selection simply **release the Load Override Button**.

PLUG n' GO OPERATION (PnG)

Plug n' Go supports the most energy efficient control strategy. For example, if at least two loads, one switch and one occupancy sensor are connected to the DLM local network, the system operates load A as Automatic ON, Automatic OFF and load B as Manual-On, Automatic-Off.

See DLM device Quick Start Guides to determine how each device affects the PNG operation of the LMRC-221.


Load Control Arbitration

To take full advantage of automatic PnG configuration, review these simple rules about load control arbitration.

After the room controllers are connected to the DLM Local Network and powered up they automatically negotiate to determine which controller becomes the Master and assigns the load numbers for each load output on the DLM Local Network.

The **Master** is the controller with the highest serial number. The LMRC-221 has one load output.

Load A ON/OFF/Dim button

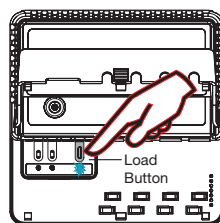


Blue LED ON when load is ON.

Load button:
Press & release for ON/OFF.

Press & hold to Dim.

In a DLM local network with only LMRC-221 room controllers, the LMRC-221 with the highest serial number is the Master, carrying Load 1. The next highest serial number would have Load 2 and so forth.

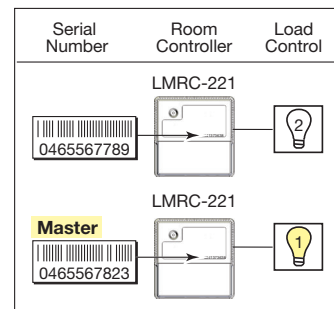

UNIT ADJUSTMENT - PUSH N' LEARN (PNL)

Load Selection Procedure


A configuration button (Config) allows access to our patented Push n' Learn™ technology to change binding relationships between sensors, switches and loads.

Step 1 Enter Push n' Learn

Press and hold the Config button (on any DLM device) for 3 seconds.

The red LED on the LMRC-221 begins to blink. When you release the button, the red LEDs on other communicating devices connected to the DLM Local Network begin to blink. They continue to blink until you exit PnL mode.

All loads in the room turn OFF immediately after entering PnL, then one load will turn ON. This is Load #1, which is bound to switch button #1 and occupancy sensors as part of the Plug n' Go factory default setting. **All switch buttons and sensors that are bound to this load have their blue LED solid ON.**

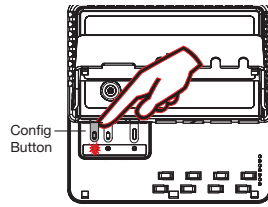

Config button & red LED

Step 2 Load selection

Press and release the Config button to step through the loads connected to the DLM Local Network. As each load turns ON note the devices (switch buttons and sensors) that are showing a bright solid blue LED. These devices are currently bound to the load that is ON. The blue LED on the room controller or plug load controller connected to the load is also lit.

- To **unbind** a switch or dimmer button from a load, press the switch button while its blue LED is ON bright. The blue LED goes dim to indicate the button no longer controls the load that is currently ON.
- To **unbind** an occupancy sensor, press the up (▲) or down (▼) adjustment button while its blue LED is ON. The blue LED turns OFF to indicate the sensor no longer controls the load that is currently ON.

Pressing the switch button or sensor up (▲) or down (▼) again while the load is ON **rebinds** the load to the button or sensor and the blue LED illuminates brightly.

Step 3 Exit Push n' Learn

Press and hold the Config button until the red LED turns OFF, approximately 3 seconds.

TROUBLESHOOTING

LEDs on a switch or sensor don't light	1. Check to see that the the device is connected to the DLM Local Network. 2. Check for 24VDC input to the device: Plug in a different DLM device at the device location. If the device does not power up, 24VDC is not present. • Check the high voltage connections to the room controller and/or plug load controller(s). • If high voltage connections are good and high voltage is present, recheck DLM Local Network connections between the device and the room controller(s).
The wrong lights and plug loads are controlled	Configure the switch buttons and sensors to control the desired loads using the Push n' Learn adjustment procedure.
LEDs turn ON and OFF but load doesn't switch	1. Make sure the DLM local network is not in PnL. 2. Check load connections to room controllers and/or plug load controllers.
Lamps do not dim, or lamps drop out at low dim levels	1. Make sure a compatible dimming ballast and rapid start sockets are installed per the ballast manufacturer's recommendation. Shunted sockets are typically not acceptable. 2. Check wiring per ballast manufacturer's instructions.